

Capresso

Capresso
Model #501
#503

COOL GRIND
Electric
Coffee Grinder

- Instructions
- Warranty

IMPORTANT SAFEGUARDS

When using this grinder, basic safety precautions should always be followed including the following:


1. Read all instructions.
2. To protect against risk of electrical shock, do not put the appliance in water or other liquid.
3. Close supervision is necessary when the appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachment not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surface, including the stove.
11. Check the grinding cup for presence of foreign objects before using.

SAVE THESE INSTRUCTIONS

Using your Grinder

1. Check the grinding cup for presence of foreign objects before using.
2. Make sure the grinding cup is completely clean and dry before use.
3. Always operate the appliance with transparent cover in place.
4. Blades are sharp. Handle carefully.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

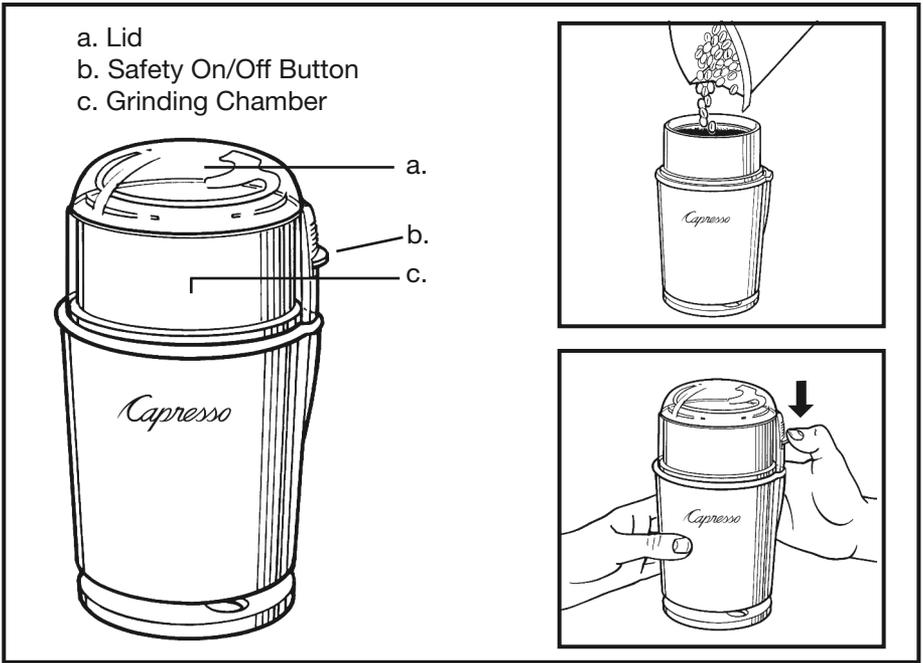

CAPRESSO COOL GRIND

Thank you for buying the Capresso grinder. Freshly ground coffee yields more aroma and flavor. Please read the following instructions to make the best use of this grinder.

RECOMMENDATIONS

This type of grinder will properly grind coffee for the following coffee machines:

- electric drip coffee makers,
- manual French press machines,
- percolators,
- manual cone coffee makers,
- steam/boiler espresso machines.

We do not recommend using this kind of grinder for pump espresso machines.

For best results grind only as much coffee as you will brew right away. Beans will maintain the aroma longer than ground coffee.

GRINDING

1. Unwind cord. Make sure the grinder sits on a flat surface.
2. Remove lid and fill the grinding chamber with beans. Use one tablespoon of beans per cup of coffee. Adjust the quantity to your own personal taste.
3. Place lid on grinder and plug in the cord. Press and hold down the safety button. Grinding will start instantly.
4. As soon as you release the button the grinding blades will stop rotating.
5. When grinding is finished, unplug machine, slowly remove the lid. Remove all of the ground coffee from the bean container. Clean grinder (see next page).

GRINDING TIMES

When grinding the maximum amount of coffee we recommend to grind for 20 to 30 seconds. For best results grind in 10 second intervals (max. 40g). When the blade stops rotating, tap the grinder lightly, then start grinding again. This will minimize the amount of coffee clinging to the bottom of the grinding container.

We do not recommend grinding for more than 30 seconds. If you grind longer, your coffee will get warmer and will lose some of its flavor.

GRINDING SPICES & HERBS

You can use your CAPRESSO grinder to grind dry spices and herbs. However, you might experience flavor transfers which can spoil your coffee taste. We recommend using a second grinder if you grind spices regularly.

CLEANING

- Unplug before cleaning.
- Empty the bean container. Wipe the inside of the container with a damp cloth.

CAUTION: Blade is sharp.

- Wipe the outside housing and the lid with a damp cloth.

NEVER IMMERSE MACHINE IN ANY LIQUID.

Limited WARRANTY

Your CAPRESSO grinder (#501, #503) is covered by the following warranty: within one year of the date of purchase, CAPRESSO will repair or replace the grinder free of charge. **Send defective product and proof of purchase to: CAPRESSO Inc.; 81 Ruckman Road; Closter, NJ 07624.** This warranty will be void if malfunction was caused by damage to the product by accident, misuse, use on frequency or voltage other than marked on the product, abuse including tampering or use for commercial purposes. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

For more information on Capresso products please visit our website:

www.capresso.com