

ENA 9 One Touch Instructions for Use

Table of contents

Your ENA 9 One Touch

IN	MPORTANT SAFEGUARDS	4
Co	ontrol elements	8
1	Preparing and using for the first time	10
	JURA on the Internet	10
	3-colour plain text display	
	Setting up the machine	10
	Filling the water tank	10
	Filling the bean container	10
	First-time use	10
	Inserting and activating the filter	
	Determining and adjusting the water hardness	12
_	Adjusting the grinder	13
2	•	14
	Coffee	
	Preparing two specialty coffees at the touch of a button	14
	Aroma Boost	
	Latte macchiato, cappuccino	
	Permanently setting the amount of water for the cup size	
	Ground coffee	
_	Hot water	
3	Daily operation	16
	Switching on the machine	
	Daily maintenance	
_	Switching off the machine	
4	Permanent settings in programming mode	17
	Products	
	Energy-saving mode	
	Automatic switch-off	
	Rinses	
	Unit for amount of water	
5	Language	20
Э	Maintenance Rinsing the machine	=-
	Rinsing the milk system	
	Cleaning the milk system	
	Dismantling and rinsing the dual spout	
	Changing the filter	
	Cleaning the machine	
	Descaling the machine	
	Descaling the macrine Descaling the water tank	
	Cleaning the bean container	
	Cleaning the Death Container	

6	Display messages	26
7	Troubleshooting	27
8	Transport and environmentally friendly disposal	28
	Transport / Emptying the system	28
	Disposal	28
9	Technical data	28
10	Index	29
11	JURA contact details / Legal information	31

Symbol description

Warnings



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

death.

DANGER indicates a hazardous situation which, if not avoided, will result in death or

⚠ WARNING

serious injury.

Display message

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION

CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

Symbols used

READY

Prompt to take action. This symbol means that you are being prompted to perform some action.
 Information and tips to make it even easier to use your IMPRESSA.

IMPORTANT SAFEGUARDS

Follow the basic safety precautions

When using electrical appliances, basic safety precautions shall always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons, do not immerse power cord, plugs, or body of machine in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of an accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven
- To disconnect, turn any control to 'OFF' then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when dispensing hot steam, hot water or hot coffee.
- For household use only.

SAVE THESE INSTRUCTIONS.

Pass them on to any subsequent user.

Intended use

The appliance is designed and intended for household use only. It shall only be used for coffee preparation and to heat milk and water, according to these instructions. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the appliance safely or
- are inexperienced or lack knowledge in how to use the appliance safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

Special power cord set instructions

- The power cord is provided to reduce the risk resulting from becoming entangled in or tripping over a long cord.
- The cord shall be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- This appliance has a 3-pin grounded plug.
- Do not modify the plug in any way.

Do NOT use extension cords.

If the user chooses to use an extension cord.

- the marked electrical rating of the extension cord shall be at least as great as the electrical rating of the appliance, and
- if the appliance is of the grounded type, the extension cord shall be a grounding type 3-wire cord, and
- the longer cord shall be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

↑ WARNING



To reduce the risk of fire or electric shock, DO NOT remove any service covers. DO NOT modify the appliance in any way that is not described in these instructions. NO user serviceable parts included. Repair MUST be done by authorized personnel only.

In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from outlet and contact JURA customer service.

IMPORTANT SAFEGUARDS

↑ CAUTION

This appliance is for household use. Any servicing other than cleaning and user maintenance shall be performed by an authorized service representative:

- Do not immerse base in water or try to disassemble.
- Do not put the appliance or any individual parts in the dishwasher.
- Check voltage to be sure that the voltage indicated on the name plate complies with your voltage.
- Never use warm or hot water to fill the water container. Use cold water only.
- Keep your hands and the cord away from hot parts of the appliance during operation.

NOTICE



- Never clean with scouring powders or hard implements.
- Ensure that the ventilation slots are not covered.
- Never pull out the drip tray during the brewing process. Only pull the drip tray when the display instructs you or when the appliance is ready for use.

NEVER DO (or you will void your warranty protection):

- Never fill instant coffee, chocolate mix etc. into the bean container or ground coffee funnel (filler funnel for ground coffee). It will damage the functioning of the brewing chamber.
- Never fill sugar coated coffee beans into the bean container. In case of doubt, call your dealer.
- Never fill anything other than coffee beans into the bean container (no chocolate, no rice, no nuts, no spices, nothing other than roasted coffee beans).
- Never fill frozen beans into the bean container. If you store beans in the freezer, let them thaw 3 to 4 hours before filling them into the bean container.
- Never fill anything but fresh, cold and clean water into the water tank, except when decalcifying.
- Never use mineral or carbonated water. You can use tap water, bottled water, spring water and reverse osmosis water.
- Never do anything with the machine which is not described in these instructions. In case of doubt, call your dealer.

- intentionally blank -

Control elements


Control elements



Figure: Your machine may look different to the one shown.

- 1 Water tank
- 2 Powder chute for ground coffee
- 3 Power cord (back of the machine)
- 4 Milk pipe
- 5 Coffee grounds container
- 6 Drip tray
- 7 Cup platform

- 8 Bean container cover
- 10 Hot-water nozzle
- 11 Height-adjustable dual spout

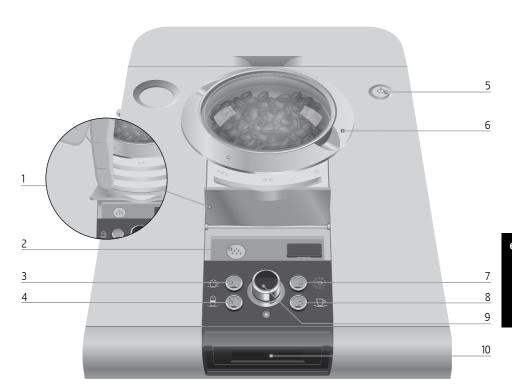

- 1 Cover
- 2 . Maintenance button
- 3 🛱 Cappuccino button
- 4 🚊 Latte Macchiato button

- 5 ტ On/Off button
- 6 Grinding wheel
- 7 🌣 Aroma Boost button
- 8 D Coffee button
- 9 Notary Switch
- 10 Display

1 Preparing and using for the first time

JURA on the Internet

Visit us on the Internet.

On the JURA website (www.jura.com) you will find interesting and up-to-date information on your ENA and on every aspect of coffee.

3-colour plain text display

Your ENA features a 3-colour plain text display. The colours of the display texts have the following meanings:

- Green: The ENA is ready for use.
- Red: The ENA is prompting you to perform some action.
- Yellow: You are in programming mode.

Setting up the machine

When setting up your ENA, please note the following:

- Place the machine on a horizontal surface that is not sensitive to water.
- Choose a spot for your ENA which protects the machine against overheating. Ensure that the ventilation slots are not covered.

Filling the water tank

To enjoy the perfect cup of coffee we recommend changing the water every day.

NOTICE

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

► Only fill the water tank with fresh, cold water.

Remove the water tank and rinse with cold water.



 Fill the water tank with fresh, cold water and reinsert it.

Filling the bean container

NOTICE

Coffee beans which have been treated with additives (e.g. sugar), ground coffee or freeze-dried coffee will damage the grinder.

- Only use roasted, untreated coffee beans to fill the bean container.
- Remove the bean container cover.
- ► Remove any dirt or foreign objects from inside the bean container.
- ► Fill the bean container with coffee beans.
- Close the bean container.

First-time use

The On/Off button also acts as a power switch. When the ENA is switched off, the machine does not consume standby energy.

⚠ WARNING

If the machine is operated with a defective power cord, there is a danger of potentially fatal electric shock.

- ▶ Never use a machine which is damaged.
- Never use a machine which has a defective power cord.

i The water volume is given as standard in II. You can change this setting to III. in programming mode (see Chapter 4 'Permanent settings in programming mode – Unit for amount of water').

Precondition: The water tank and bean container are full.

- Insert the power supply plug into a power socket.
- O ► Press the On/Off button to switch the machine on.

LANGUAGE ENGLISH

- i You can select another language by turning the Rotary Switch.
- Press the Rotary Switch to confirm the language setting.



OK, the language is set. PRESS ROTARY

▶ Place a receptacle under the dual spout.



- Press the Rotary Switch.
 SYSTEM FILLING HEATING
 PRESS ROTARY
- ◆ Press the Rotary Switch to start the rinse. RINSING, the system rinses itself, stopping automatically. READY

Inserting and activating the filter

Your ENA no longer has to be descaled if you are using the CLEARYL Blue filter cartridge.

† Perform the 'inserting the filter' operation without any interruptions. This will ensure that your ENA always produces its best.

Precondition: READY is displayed.

- ◆ Press and hold the Rotary Switch until RINSE appears.
- Turn the Rotary Switch until FILTER is displayed.
- Press the Rotary Switch to enter the program item.
- Turn the Rotary Switch until Y≡⊆ √ is displayed.
- Press the Rotary Switch to confirm the setting.

OK

INSERT FILTER

- ► Remove and empty the water tank.
- ► Open the filter holder.
- Insert the filter cartridge into the water tank, exerting slight pressure.



- Close the filter holder. It will click into place audibly.
- **i** After three months, the filter will cease to work. You can check the elapsed time by referring to the date plate on the filter holder in the water tank.
 - ► Fill the water tank with fresh, cold water and reinsert it
 - ► Place a receptacle (at least 17 oz or 500 ml) under the hot-water nozzle.

1 Preparing and using for the first time

- ♣ Press the Rotary Switch.
 ♠ THE LITHE
- → Turn the switch anticlockwise to position ↓

 FILTER RINGING, water flows out of
 the hot-water nozzle.
 - You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.
 - The water may be slightly discolored. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically, CLOSE TAP.

Turn the switch clockwise to position □.
 HEATING
 READY
 The filter is now activated.

Determining and adjusting the water hardness

i If you are using the CLEARYL Blue filter cartridge and have activated it in programming mode, you will not be able to adjust the water hardness.

The harder the water is, the more frequently the ENA needs to be descaled. It is therefore important to adjust the water hardness.

The water hardness can be adjusted on a continuous scale between 1 °dH and 30 °dH.

Level	Display German Degree (°dH)	Degrees of general hardness (°dGH)	Parts per million (ppm)	Indicator Strip number of 'reddish' fields
Not active	-	_	-	-
Very soft water	<3	<3	< 53.4	None
Soft water	> 4	> 4	> 71	1
Hard water	> 8.4	> 8.4	> 150	2
Very hard water	> 14	> 14	> 250	3

Determining the water hardness

You can find out what the water hardness is by using the Aquadur® test strip supplied as standard.

- Hold the test strip briefly (for one second) under running water.
- ► Shake off the water.
- Wait for about one minute.
- ➤ You will then be able to read the degree of water hardness from the discoloration of the Aquadur® test strip and the description on the packaging.



The water hardness can now be adjusted.

Adjusting the water hardness

Example: Change the water hardness setting from 16 4 H to 25 4 H.

Precondition: READY is displayed.

- ◆ Press and hold the Rotary Switch until RINSE appears.
- Turn the Rotary Switch until HARDNESS is displayed.
- ◆ Press the Rotary Switch to enter the program item.
 ★ ○ ★ ○ ★ ○
- Turn the Rotary Switch until ≘≡ ÷ dH is displayed.
- ◆ Press the Rotary Switch to confirm the setting.
 ○ H, the water hardness is set.
- Turn the Rotary Switch until EXIT is displayed.

◆ Press the Rotary Switch to exit programming mode.
READY

Adjusting the grinder

You can adjust the grinder on a continuous scale to suit the degree of roast of your coffee.

NOTICE

If you adjust the consistency of grind when the grinder is not operating, the grinding wheel could be damaged.

Only adjust the consistency of grind when the grinder is running.

The consistency of grind setting is correct if the coffee flows regularly from the coffee spout. In addition a fine, thick crema forms.

Example: Change the consistency of grind **during** the preparation of a coffee.

- ► Place a cup under the dual spout.
- - ► Turn the grinding wheel to the desired position while the grinder is running.



i COFFEE, the preset amount of water flows into the cup and preparation stops automatically.

REALLY

2 Preparation

⚠ WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- Use extreme care when handling hot liquid or steam.
- ► Allow liquid to cool down before drinking.
- ► In the event of scalding, rinse affected area with cold water and seek medical attention.
- ► Keep children AWAY.

For a summary of the different temperatures, please refer to Chapter 4 'Permanent settings in programming mode – Products'.

- You can interrupt preparation at any time while a specialty coffee or specialty coffee with milk is being prepared. Just press any button.
- Before and during the grinding operation you can select the coffee strength for '1 coffee', 'cappuccino' and 'latte macchiato': MILD, NORMAL, STRONG.
- i During preparation, you can change the preset amount of water by turning the Rotary Switch.
- You can follow the current status of preparation on the progress bar.
- i The water volume is given as standard in □ℤ. You can change this setting to ℍL in programming mode (see Chapter 4 'Permanent settings in programming mode Unit for amount of water').

You can make permanent settings for all products in programming mode (see Chapter 4 'Permanent settings in programming mode – Products').

Coffee

Precondition: READY is displayed.

► Place a cup under the dual spout.

▶ Press the Coffee button to start preparation.
i COFFEE, the preset amount of water flows into the cup.
Preparation stops automatically

Preparation stops automatically.

Preparing two specialty coffees at the touch of a button

The preparation of 2 espressi and 2 coffees follows this same model.

Example: Prepare two espressi. **Precondition:** READY is displayed.

- ► Place two espresso cups under the dual spout.
- Press the Aroma Boost button twice (within two seconds) to start preparation.
 ESPRESSI, the preset amount of water flows into the cups.
 Preparation stops automatically.

READY

Aroma Boost

When you prepare an 'Aroma Boost' the maximum possible amount of powder is freshly ground and extracted to make an extra strong espresso or coffee.

Precondition: READY is displayed.

- ► Place a cup under the dual spout.
- Press the Aroma Boost button to start preparation.

SPECIAL, the preset amount of water flows into the cup.

Preparation stops automatically.


Latte macchiato, cappuccino

Your ENA can prepare a latte macchiato or cappuccino at the touch of a button. There is no need to move the glass or cup.

Example: Proceed as follows to prepare one latte macchiato.

Precondition: READY is displayed.

- ► Place a glass under the dual spout.
- Remove the protective cover of the dual spout.
- ► Connect the milk pipe to the dual spout.
- Immerse the other end of the milk pipe in a receptacle with milk (figure: optional JURA 0.4 liter stainless steel vacuum milk container).

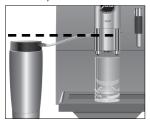

- i Ensure that the filling height of the milk is no higher than the milk pipe connection on the dual spout.
- ₱ Press the Latte Macchiato button.
 LATTE MAC = , the milk foam is prepared.
 Preparation stops automatically when the preset amount of milk is reached.
 PAUSE
 - i There is a short interval while the hot milk separates from the milk foam. This allows the typical layers of a latte macchiato to form. You can choose the length of this interval in programming mode (see Chapter 4 'Permanent settings in programming mode Products').

LATTE MAC ..., coffee preparation starts.
The preset amount of water flows into the cup.

Preparation stops automatically. \square

Permanently setting the amount of water for the cup size

It is easy to make permanent settings for the amount of water for all specialty coffees according to the cup size. Adjust the amount once as shown in the following example. Every time you prepare a drink in the future, this amount of water will be dispensed.

Example: Permanently adjust the amount of water for one coffee to the cup size.

Precondition: □□□□□□ is displayed.

- ► Place a cup under the dual spout.
- ▶ Press and hold the Coffee button.1 COFFEE, the grinding operation starts.
- Continue to hold the Coffee button down until ENOUGH COFFEE ₹ appears.
- Release the Coffee button.
 Preparation starts and the coffee flows into the cup.
 - Press any button as soon as there is sufficient coffee in the cup.
 ○K, 1 ○○FFEE, the set amount of water for one coffee is permanently stored.
 READY
 - i You can alter this setting at any time by repeating the above procedure.

Ground coffee

You can choose to use a second coffee variety, for example decaffeinated coffee, with the powder chute for ground coffee.

- **i** Never add more than two level measuring spoons of ground coffee.
- i Use ground coffee which is not ground too finely. Very fine coffee can block up the system so that the coffee only comes out in drips.
- i If you did not fill the machine with a sufficient amount of ground coffee, MOT ENOUGH FOMDER is displayed and the ENA stops the operation.

3 Daily operation

The desired specialty coffee must be prepared within approximately one minute after filling with the ground coffee. Otherwise the ENA stops the operation and is once more ready for use.

The preparation of 1 coffee, 2 coffees, 2 espressi, cappuccino and latte macchiato with ground coffee follows this model. It is not possible to prepare an Aroma Boost with ground coffee.

Example: Prepare a cup of coffee using ground coffee.

Precondition: READY is displayed.

- ▶ Place a cup under the dual spout.
- ► Open the powder chute. FILL FOMDER:
- Place the filler funnel for ground coffee on the powder chute.



- ► Place one level measuring spoon of ground coffee into the filler funnel.
- ► Remove the filler funnel.
- ► Close the powder chute. SELECT BUTTON
- ▶ Press the Coffee button to start preparation.
 i COFFEE, the preset amount of water flows into the cup.
 Preparation stops automatically.
 FERTY
 - i It is also possible to prepare two cups of ground coffee. To do this, place two cups under the dual spout and add two level measuring spoons of ground coffee into the filler funnel. Press the Coffee button

 twice (within two seconds) to start preparation.

Hot water

↑ CAUTION

There is a danger of scalding from hot water splashes.

Avoid direct contact with the skin.

Precondition: □□□□□□ is displayed.

- ► Place a cup under the hot-water nozzle.
- ① ► Turn the switch clockwise when there is sufficient water in the cup. READY

3 Daily operation

Switching on the machine

When the ENA is switched on, a prompt to perform a rinse operation automatically appears.

- ♦ Press the On/Off button to switch the ENA on. HEATING PRESS BOTHEY
 - ► Place a receptacle under the dual spout.
- Press the Rotary Switch to start the rinse.
 RINSING, the system rinses itself, stopping automatically.
 READY

Daily maintenance

To ensure that you get many years of reliable service out of your ENA and to guarantee the optimum coffee quality, the machine requires daily maintenance.

- ► Remove the drip tray.
- Empty the coffee grounds container and drip tray and rinse with warm water.
- ► Reinsert the coffee grounds container and the drip tray.
- ► Rinse the water tank with clean water.

- Dismantle and rinse the dual spout (see Chapter 5 'Maintenance – Dismantling and rinsing the dual spout').
- Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfiber cloth).

Switching off the machine

When the ENA is switched off, the system is automatically rinsed if a specialty coffee has been prepared. If cappuccino or latte macchiato has been prepared, the cappuccino rinse also takes place.

- ► Place a receptacle under the dual spout.
- Press the On/Off button.
 RINSING, CAPPUCCING
 RINSING, the system rinses itself,
 stopping automatically. The ENA is switched off.
 - i When the ENA is switched off with the On/ Off button, the machine does **not consume standby energy.**

4 Permanent settings in programming mode

Products

In the program item FRODUCT you can make individual settings for all specialty coffees and milk specialties.

★ WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- Use extreme care when handling hot liquid or steam.
- ► Allow liquid to cool down before drinking.
- ► In the event of scalding, rinse affected area with cold water and seek medical attention.
- ► Keep children AWAY.

You can make the following permanent settings for the specialty coffees:

- Amount of water: ② . 등 ○Z ⊗ . ② ○Z (25 ml 240ml) (per cup)
- Coffee strength (for 1 coffee): MILE, NORMAL, STRONG
- Temperature: NORMAL, HIGH

You can make the following permanent settings for latte macchiato and cappuccino:

- Amount of milk foam: 3 SEC 120 SEC
- Interval: ∅ SEC 8∅ SEC
- Coffee strength: MILD, NORMAL, STRONG
- Amount of water: ② . 등 ○Z ⊗ . ② ○Z (25 ml 240ml)
- Temperature: NORMAL, HIGH

Permanent settings in programming mode always follow the same model.

Example: Permanently change the coffee strength (FLAVOUR) for 1 coffee from NORMAL to STRONG.

Precondition: READY is displayed.

- Press and hold the Rotary Switch until
 RINGE appears.
- Turn the Rotary Switch until ₱₱○□U○T is displayed.
- Press the Rotary Switch to enter the program item.
 SELECT BUTTON
 - **i** Next select the button of the product for which you would like to make settings. No product is prepared at this point.
 - i To change the setting for a double product, press the corresponding button twice within two seconds.
- - 1 COFFEE WATER
- Turn the Rotary Switch until FLAVOUR is displayed.

4 Permanent settings in programming mode

◆ Press the Rotary Switch to enter the program item. NORMAL

- Turn the Rotary Switch until STRONG is displayed.
- ◆ Press the Rotary Switch to confirm the setting. ○ K, the coffee strength is set.

FLAVOUR

- Turn the Rotary Switch until ■XIT is displayed.
- ◆ Press the Rotary Switch to exit the program

PROFILITE

- displayed.
- ◆ Press the Rotary Switch to exit programming mode.

READY

Energy-saving mode

The ENA can be permanently set to an energy-saving mode (Energy Save Mode, E.S.M.©):

- FREEDING -
 - The ENA is constantly ready for use.
 - All specialty coffees as well as hot water can be prepared without having to wait.
- FMFRAYA
 - Soon after the last preparation, the ENA stops heating up. As soon as the energy-saving temperature is reached, this is indicated in the display by the message ENERGY □N – this may last several minutes. The machine must heat back up before the next preparation.
 - Before coffee and hot water preparation, the machine heats up.

Example: Change the energy-saving mode from ENERGY - to ENERGY 4.

Precondition: READY is displayed.

♠ Press and hold the Rotary Switch until **RINSE** appears.

- Turn the Rotary Switch until ENERGY is displayed.
- ♠ Press the Rotary Switch to enter the program item. ECCHINY -
- Turn the Rotary Switch until ECONOMY ← is displayed.
- ♠ Press the Rotary Switch to confirm the settina. ○ the energy-saving mode is set. FMFRAY
- ♠ Turn the Rotary Switch until EXIT is displayed.
- ♠ Press the Rotary Switch to exit programming mode.

READY

Automatic switch-off

By instructing your ENA to automatically switch itself off, you can cut down your energy consumption. If this function is activated, your ENA switches off automatically after the preset time following the last action on the machine.

The automatic switch-off can be set to between 15 minutes and 9 hours.

Example: Change the automatic switch-off time from 2 HRS to 1 HRS.

Precondition: READY is displayed.

- ◆ Press and hold the Rotary Switch until **RINSE** appears.
- ♠ Turn the Rotary Switch until OFF AFTER: is displayed.
- ◆ Press the Rotary Switch to enter the program item. ? HR=
- Turn the Rotary Switch until ! HR⊆ is displayed.
- ♠ Press the Rotary Switch to confirm the ∴ the automatic switch-off time is set.

- Turn the Rotary Switch until EXIT is displayed.
- Press the Rotary Switch to exit programming mode.

READY

Rinses

In the program item RINSES you can make the following settings:

- INIT RINSE MANUAL
 - The switch-on rinse must be started manually.
- INIT RINSE AUTOMATIC
 - The switch-on rinse is started automatically.
- C-RINSE AFTER 10'
 - You are prompted to perform a cappuccino rinse 10 minutes after preparation of a specialty coffee with milk.
- C-RINSENOW
 - You are prompted to perform a cappuccino rinse immediately after preparation of a specialty coffee with milk.

Example: Change the setting such that the cappuccino rinse is performed **immediately** after preparation of a specialty coffee with milk.

Precondition: RERDY is displayed.

- Press and hold the Rotary Switch until FINSE appears.
- Turn the Rotary Switch until RINSES is displayed.
- Press the Rotary Switch to enter the program item.

INIT RINSE

- Turn the Rotary Switch until ○──RINSE is displayed.
- Press the Rotary Switch to enter the program item.
 PFTER 10 '
- Turn the Rotary Switch until ₩□₩ is displayed.
- Press the Rotary Switch to confirm the setting.

rik:

CHRINSE

- Turn the Rotary Switch until EXIT is displayed.
 - ► Press the Rotary Switch to exit the program item.

RINSES

- Turn the Rotary Switch until EXIT is displayed.
- Press the Rotary Switch to exit programming mode.

READY

Unit for amount of water

The water volume is given as standard in OZ. You can change this setting to ML in programming mode.

Example: Change the unit for the amount of water from OZ to ML..

Precondition: READY is displayed.

- Press and hold the Rotary Switch until RINSE appears.
- Turn the Rotary Switch until □ISFLAY is displayed.
- Press the Rotary Switch to enter the program item.
- Turn the Rotary Switch until : ... is displayed.
- Press the Rotary Switch to confirm the setting.

○H, the unit for the amount of water is set.

- Turn the Rotary Switch until EXIT is displayed.
- Press the Rotary Switch to exit programming mode.

READY

5 Maintenance

Language

In this program item you can set the language used by your ENA.

Example: Change the language from ENGLISH to DEUTSCH.

Precondition: READY is displayed.

- Press and hold the Rotary Switch until FINSE appears.
- Turn the Rotary Switch until LANGUAGE is displayed.
- Press the Rotary Switch to enter the program item.
 ENGLISH
- Turn the Rotary Switch until □EUTSOH is displayed.
- ◆ Press the Rotary Switch to confirm the setting.
 ○K, the language is set.
 SPRACHE
- Turn the Rotary Switch until EXIT is displayed.
- Press the Rotary Switch to exit programming mode.
 EFFFTT

5 Maintenance

⚠ WARNING

Use of maintenance products that are harmful to health and discharge of liquids during maintenance program. Harmful if swallowed. Irritating to eyes and skin.

- ► Keep children AWAY.
- Keep children away from the machine while it is performing a maintenance program.
- Avoid contact with skin and eyes.
- ► Avoid generation of dust. Do not inhale dust.
- ► When using do not eat or drink.
- Keep maintenance products away from food, drink and animal food.
- Keep container tightly closed and dry. Keep in a cool place.

Your ENA has the following integrated maintenance programs:

- Cappuccino frother cleaning (□-□LEAN)
- Rinsing the machine (RIMSE)
- Cappuccino rinse (□-RINSE)
- Cleaning the machine (□LEAN)
- Changing the filter (FILTER)
- Descaling the machine (□≡−≡□⊓∟≡)

Rinsing the machine

You can initiate the rinse operation manually at any time.

Precondition: RERDY is displayed.

- ► Place a receptacle under the dual spout.
- ◆ Press and hold the Rotary Switch until RIMSE appears.
- Press the Rotary Switch to enter the program item.
 C—CLEAN
- Turn the Rotary Switch until ■INSE is displayed.
- Press the Rotary Switch to initiate the rinse operation.

RINSING, the system rinses itself, stopping automatically.

Rinsing the milk system

After each milk preparation, the ENA prompts you to perform a cappuccino rinse.

Precondition: CAPPUCCING RINSE is displayed.

► Place a receptacle under the dual spout.



Press the Rotary Switch to start the cappuccino rinse.

CAPPUCCING RINSING, the milk system is rinsed.

The rinse stops automatically and READY appears on the display.

Cleaning the milk system

The dual spout should be cleaned **daily** if milk has been prepared to make sure it functions perfectly. Your ENA will **not** prompt you to clean the dual spout.

★ WARNING

Non-recommended cleaning agents will not optimally remove milk residues. This may cause the cappuccino frother to become blocked and fly off the machine. Discharge of hot steam.

► Use only original JURA milk system cleaner.

 
Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ► Keep children AWAY.
- ► Avoid contact with skin and eyes.
- After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.
- i JURA milk system cleaner is available from specialized dealers.
- ◆ Press and hold the Rotary Switch until RINSE appears.
- Press the Rotary Switch to enter the program item.
 CHOLEAN

 Press the Rotary Switch to start cappuccino frother cleaning.

CLEANER FOR CAPPU.

- Remove the milk pipe from the receptacle with milk.
- Pour 8.5 oz (250 ml) of fresh water into a receptacle and add one capful of milk system cleaner.
- ► Immerse the milk pipe in the receptacle.
- Place another receptacle under the dual spout.



◆ Press the Rotary Switch.

CLEANING, the milk system and the pipe are cleaned.

The operation is interrupted, MATER FOR CAPPUCCING.

- Rinse the receptacle thoroughly, fill it with 8.5 oz (250 ml) of fresh water and immerse the milk pipe in it.
- ► Empty the receptacle under the dual spout and place it back underneath.
- Press the Rotary Switch.
 CLEANING, the milk system and the pipe are rinsed with fresh water.
 The operation stops automatically.
 READY

Dismantling and rinsing the dual spout

The dual spout should be dismantled and rinsed daily if milk has been prepared to make sure it functions perfectly. Your ENA will not prompt you to clean the dual spout.

Remove the milk pipe and rinse thoroughly under running water.

5 Maintenance


 Press the releasing devices and pull the dual spout down and off.




► Push the milk system down and remove it.



 Dismantle the milk system into its individual parts.

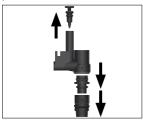

- Rinse all parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 250 ml cold water and 1 capful of JURA milk system cleaner. Then rinse the parts thoroughly.
- ► Fit the air intake pipe.

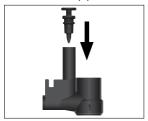

 Reassemble the milk system, noting the numbering on the parts.



- ► Insert the assembled individual parts into the dual spout and press them together.
- Fit the dual spout on the machine. It will click into place audibly.



Changing the filter

- **1** After 2000 oz (60 liters) of water have flowed through, the filter will cease to work. Your ENA will automatically prompt you to change the filter.
- **1** After three months, the filter will cease to work. You can check the elapsed time by referring to the date plate on the filter holder in the water tank.
- i If the CLEARYL Blue filter cartridge is not activated in programming mode, you will not be prompted to change the filter.

Precondition: FILTER / REFIDY is displayed.

- ► Open the cover behind the Rotary Switch.
- ∴ Press the Maintenance button.
 INSERT FILTER
 - ► Remove and empty the water tank.
 - Open the filter holder and remove the old filter cartridge.

 Insert a new filter cartridge into the water tank, exerting slight pressure.



- Close the filter holder. It will click into place audibly.
- Fill the water tank with fresh, cold water and reinsert it.
- ► Place a receptacle (at least 17 oz or 500 ml) under the hot-water nozzle.
- ♣ Press the Rotary Switch.
 ○FEN THE
- → Turn the switch anticlockwise to position ↓
 .
 FILTER RINGING, water flows out of the hot-water nozzle.
 - You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.
 - i The water may be slightly discolored. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically, CLOSE TAP.

⑤ ► Turn the switch clockwise to position □. HEATING READY

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the ENA will prompt you to clean it.

⚠ WARNING

Non-recommended (e.g. liquid) cleaning agents may contain substances that could damage the machine or leave residues.

Use only original JURA cleaning tablets.
 These are specially formulated for your machine.

★ WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ► Keep children AWAY.
- ► Avoid contact with skin and eyes.
- ► Avoid generation of dust. Do not inhale dust.
- After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.
- **1** The cleaning program lasts approximately 15 minutes.
- **1** Do not interrupt the cleaning program. The quality of cleaning will be impaired if you do so.
- i JURA cleaning tablets are available from specialized dealers.

Precondition: □LEAN / READY is displayed.

- ► Open the cover behind the Rotary Switch.
- riangle Press the Maintenance button.

EMPTY TRAY

 Empty the drip tray and coffee grounds container and reinsert them.

PRESS RUTHRY

5 Maintenance

► Place a receptacle under the dual spout.

Press the Rotary Switch to start cleaning.
 CLEANING, water flows out of the dual spout.

The operation is interrupted, ADD TARLET.

 Open the powder chute for ground coffee and drop in a JURA cleaning tablet.



- ► Close the powder chute for ground coffee.

 FRESS ROTARY
- Press the Rotary Switch.
 CLEANING, water flows out of the dual spout repeatedly.
 EMPTY TRAY
 - ► Empty the drip tray and coffee grounds container and reinsert them.

HERTING RERDY

Descaling the machine

The ENA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

⚠ WARNING

Non-recommended descaling agents (e.g. vinegar) may contain substances that could damage the machine or leave residues.

Use only original JURA descaling tablets.
 These are specially formulated for your machine.

⚠ WARNING

Harmful and irritating descaling agent. Harmful if swallowed. Irritating to eyes and skin.

- ► Keep children AWAY.
- ► Avoid contact with skin and eyes.
- ► Avoid generation of dust. Do not inhale dust.
- After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- After eye contact, immediately flush eyes with plenty of water. Remove contact lenses.
 Seek medical advice.
- If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

NOTICE

If the descaling operation is interrupted, there may be damage to the machine.

- Allow the descaling program to run to the end.
- **i** The descaling program lasts approximately 40 minutes.
- i JURA descaling tablets are available from specialized dealers.
- i If you use a CLEARYL Blue filter cartridge and this is activated, you will not be prompted to descale.
- i If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out. Clean up any splashes immediately.

Precondition: DE-SOALE / READY is displayed.

- ► Open the cover behind the Rotary Switch.
- ♣ Press the Maintenance button.
 EMFTY TRAY
 - Empty the drip tray and coffee grounds container and reinsert them.

ACENT IN TANK

► Remove and empty the water tank.

 Completely dissolve the contents of one blister (three JURA descaling tablets) in a receptacle holding 17 oz (500 ml) of water.
 This may take several minutes.



- ► Place one receptacle each under the hot-water nozzle and the dual spout.
- Turn the switch clockwise to position □.
 □E-SCALING, the descaling operation is continued. Water flows out of the dual spout repeatedly.
 EMPTY TERY
 - ► Empty the drip tray and coffee grounds container and reinsert them.

 FILL MATER TANK
 - Empty both receptacles and place them back under the hot-water nozzle and the dual spout.
 - ► Remove the water tank, rinse thoroughly, fill with fresh, cold water and reinsert.
- Turn the switch anticlockwise to position ↓.
 □E—S□ALING, water flows out of the hot-water nozzle.
 - The operation is interrupted, CLOSE TAP.
- Turn the switch clockwise to position □.
 □E-SCALING, the descaling operation is continued. Water flows out of the dual spout repeatedly.

EMPTY TRAY

- ► Empty the drip tray and coffee grounds container and reinsert them.
- i If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ► Remove the water tank.
- ► If you use a CLEARYL Blue filter cartridge, remove it.
- Descale the tank with a mild conventional descaling agent in accordance with the manufacturer's instructions.
- ► Rinse the water tank thoroughly.
- If you use a CLEARYL Blue filter cartridge, reinsert it.
- ► Fill the water tank with fresh, cold water and reinsert it

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time

- → Press the On/Off button to switch the machine off.
 - ► Disconnect the power supply plug.
 - ► Remove the bean container cover.
 - ► Remove the coffee beans with a vacuum cleaner.
 - ► Clean the bean container with a soft, dry cloth.
 - ► Fill the bean container with fresh coffee beans, then close the bean container cover.

6 Display messages

Message	Cause/Result	Action
FILL WATER TANK	The water tank is empty or not correctly inserted. You cannot prepare any products.	► Fill the water tank (see Chapter 1 'Preparing and using for the first time – Filling the water tank'). ► Insert the water tank.
EMPTY GROUNDS	The coffee grounds container is full. No specialty coffees can be prepared, but hot water preparation is possible.	► Empty the coffee grounds container and the drip tray (see Chapter 3 'Daily operation – Daily maintenance').
TRAY MISSING	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any products.	► Insert the drip tray.
FILL BEANS	The bean container is empty. No specialty coffees can be prepared, but hot water preparation is possible.	► Fill the bean container (see Chapter 1 'Preparing and using for the first time – Filling the bean container').
PRESS ROTARY	The ENA is prompting you to perform a rinse or continue a maintenance program that was already started.	► Press the Rotary Switch to start the rinse or to continue the maintenance program.
CAPPUCCINO RINSE	The ENA requests a cappuccino rinse.	► Press the Rotary Switch to start the cappuccino rinse.
READY/CLEAN	The ENA is prompting you to clean it.	► Perform cleaning (see Chapter 5 'Maintenance – Cleaning the machine').
READY/DE-SCALE	The ENA is prompting you to descale it.	► Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').
READY/FILTER	After 60 liters of water have flowed through the CLEARYL Blue filter cartridge, it will cease to work.	► Replace the CLEARYL Blue filter cartridge (see Chapter 5 'Maintenance – Changing the filter').
NOT ENOUGH POWDER	There is insufficient ground coffee in the machine; the ENA stops the operation.	► The next time you prepare a beverage, add more ground coffee (see Chapter 2 'Preparation – Ground coffee').
тоо нот	The system is too hot to start a maintenance program.	► Wait for several minutes until the system has cooled or prepare a specialty coffee or hot water.

7 Troubleshooting

Problem	Cause/Result	Action
Insufficient foam is produced when the milk is frothed or milk sprays from the dual spout.	The dual spout is dirty.	► Clean the dual spout (see Chapter 5 'Maintenance – Cleaning the milk system'). ► Dismantle and rinse the dual spout (see Chapter 5 'Maintenance – Dismantling and rinsing the dual spout').
Coffee only comes out in drips when it is being prepared.	Coffee or ground coffee has been ground too finely and is blocking the system.	► Set the grinder to a coarser setting or use coarser ground coffee (see Chapter 1 'Preparing and using for the first time – Adjusting the grinder').
Water hardness cannot be adjusted.	The CLEARYL Blue filter cartridge is activated.	► Deactivate the CLEARYL Blue filter cartridge in programming mode.
FILL WATER TANK is displayed although the water tank is full.	The water tank float is trapped.	► Descale the water tank (see Chapter 5 'Maintenance – Descaling the water tank').
Grinder is making a very loud noise.	There are foreign objects in the grinder.	Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').
ERROR 2 is displayed.	If the machine was exposed to the cold for a long period of time, heating is disabled for safety reasons.	► Warm the machine at room temperature.
Other ERROR messages are displayed.	-	► Switch off the ENA with the On/Off button. Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

i If you were unable to solve the problem, contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

Transport and environmentally 9 Technical data friendly disposal

Transport / Emptying the system

Keep the packaging for your ENA. It should be used to protect the machine during transport.

In order to protect the ENA from frost during transport, the system must be emptied.

Precondition: READY is displayed.

- ► Place a receptacle under the hot-water nozzle.
- → Turn the switch anticlockwise to position

 ↓... MATER, hot water flows out of the hot-water nozzle.
 - ► Remove and empty the water tank. Hot water will continue to flow until the system is empty. CLOSE TAP
- ♠ Turn the switch clockwise to position □. FILL WATER TANK
- ⇔ Press the On/Off button to switch the machine off.
 - The next time you use the machine the system must be refilled (see Chapter 1 'Preparing and using for the first time -First-time use').

Disposal

Please dispose old machines in an environmentally neutral way.



Voltage	120 V ~, 60 Hz
Power	1450 W
Safety test	CUL US
Energy consumption	Approx. 12 Wh
Energy consumption	Approx. 3.5 Wh
Pump pressure	Static, max. 15 bar
Holding capacity of water tank (without filter)	37.2 oz (1.1 l)
Holding capacity of bean container	4.4 oz (125 g)
Holding capacity of coffee grounds container	Approx. 10 servings
Power cord length	Approx. 43.3 in. (Approx. 1.1 m)
Weight	Approx. 20.7 lb (Approx. 9.4 kg)
Dimensions (W × H × D)	9.4 × 14.2 × 17.5 in. (23.8 × 36 × 44.5 cm)

Directives

The machine complies with the following directives:

- Standard UL 1082
- Canadian Standard CSA C22.2 No. 64

10 Index

4	D
Addresses 31 Aroma Boost 14 Automatic switch-off 18	Degree of water hardness 12 Descaling Machine 24 Water tank 25
Bean container Cleaning 25 Filling 10 Bus bar Technical data 28 Button Aroma Boost 9 Cappuccino button 9 Coffee button 9 Latte Macchiato button 9 Maintenance button 9 On/Off button 9	Determining and adjusting the water hardness 12 Display 9, 10 Display messages 26 Drip tray 8 Dual spout 8 Dismantling and cleaning 21 E Emptying the system 28 Energy-saving mode 18 Errors Troubleshooting 27
Cappuccino 14 Cappuccino frother cleaning Cleaning the milk system 21 Cappuccino rinse Rinsing the milk system 20 Cleaning Bean container 25 Machine 23 CLEARYL Blue filter cartridge Changing 22 Inserting and activating the filter 11 Coffee 14 Coffee grounds container 8 Consistency of grind Adjusting the grinder 13 Grinding wheel 9 Contact details 31 Cover 9 Bean container 8 Cup platform 8 Customer support 31	F Filling Bean container 10 Water tank 10 Filter Changing 22 Inserting and activating the filter 11 First-time use 10 G Ground coffee 15 H Hotline 31 Hot water 16 Hot-water nozzle 8 Hot water preparation Switch for hot water preparation 8 I Important safeguards Safety 4 Instant coffee Ground coffee 15

10	Index		
J		R	
	JURA		Rinses 19
	Contact details 31		Rinsing
	Internet 10		Machine 20 Rotary Switch 9
L		_	Rotary Switch 5
	Language 20	S	
	Latte macchiato 14		Safety
M	1		Important safeguards 4
•	Machine		Settings Permanent settings in programming mode
	Cleaning 23		17
	Descaling 24		Setting up
	Rinsing 20		Setting up the machine 10
	Setting up 10		Switch for hot water preparation 8
	Switching off 17		Switching off 17
	Switching on 16		Switching on 16 Switch-off
	Maintenance		Automatic switch-off 18
	Daily maintenance 16 Maintenance 20		Symbol description 3
	Messages, display 26	_	5,56. 4252
_		T	
P			Technical data 28
	Permanently setting the water for the cup size		Tel 31 Troubleshooting 27
	15 Permanent settings in programming mode 17		-
	Powder chute 8	U	
	Powder chute for ground coffee 8		Unit for amount of water 19
	Power cord 8		Use, First-time 10
	Preparation 14	W	I
	Aroma Boost 14		Water tank
	Cappuccino 14 Coffee 14		Descaling 25
	Ground coffee 15		Filling 10
	Latte macchiato 14		Website 10
	Problems		
	Troubleshooting 27		
	Programming mode 17		
	Automatic switch-off 18		
	Energy-saving mode 18		
	Language 20 Products 17		
	Rinses 19		
	Unit for amount of water 19		

11 JURA contact details / Legal information

Headquarters

JURA Elektroapparate AG Kaffeeweltstrasse 10 CH-4626 Niederbuchsiten Switzerland

	USA: JURA Inc.	Canada: FAEMA
Customer Service		
Phone E-Mail	1-800-220-5701 info@us.jura.com	1-(855)-544-8600 info@juracanada.ca
Opening Hours (EST)	Mon – Thu 9 am – 9 pm Fri 9 am – 8 pm Sat 9 am – 5 pm	
Distributor Address	81 Ruckman Road Closter, NJ 07624	115 Matheson Boulevard East Mississauga, Ontario, L4Z 1X8
Phone Fax	001 (201) 767-3999 001 (201) 767-9684	1-(905)-501-8600
Internet	www.us.jura.com	www.faema-canada.jura.com

Wou will find additional contact details for your country at www.jura.com.

Technical changes

We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colours of the machine. Some details of your ENA may vary.

Feedback

Your opinion is important to us! Use the contact details at www.jura.com.

Copyright

The instructions for use contain information which is protected by copyright. It is not permitted to photocopy these instructions for use or translate them into another language without the prior written consent of JURA Elektroapparate AG.

– intentionally blank –