

IMPRESSA F7 Instructions for Use



Table of contents

Your IMPRESSA F7

ΙN	IPORTANT SAFEGUARDS	4
Co	ontrol elements	8
1	Preparing and using for the first time	10
	JURA on the Internet	10
	Setting up the machine	10
	Filling the bean container	10
	First-time use	10
	Determining the water hardness	13
	Adjusting the grinder	14
	Filling the water tank	14
2	Preparation	15
	Ristretto, espresso and coffee	16
	Two specialty coffees at the touch of a button	
	Cappuccino	
	Milk foam	
	Ground coffee	
	Permanently setting the amount of water for the cup size	
	Hot water	21
3	Daily operation	22
	Switching on	
	Daily maintenance	
	Switching off	23
4	Permanent settings in programming mode	24
	Product settings	
	Setting the water hardness	
	Energy-saving mode	
	Automatic switch-off	
	Rinses	
	Restore factory settings	
	Querying information	
	Unit for amount of water	
	Language	
5	Maintenance	33
	Rinsing the machine	
	Rinsing the fine foam frother	
	Cleaning the fine foam frother	
	Dismantling and rinsing the fine foam frother	
	Dismantling and rinsing the professional fine foam frother	
	Inserting and activating the filter	37

11	JURA contact details / Legal information	56
10	Index	50
9	Technical data	49
	Disposal	48
	Transport / Emptying the system	
8	Transport and environmentally friendly disposal	48
7	Troubleshooting	46
6	Display messages	45
	Descaling the water tank	44
	Cleaning the bean container	43
	Descaling the machine	4
	Cleaning the machine	
	Changing the filter	38

Symbol description

Warnings



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION

CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE NOTICE is used to address practices not related to personal injury.

Symbols used

- Prompt to take action. This symbol means that you are being prompted to perform some action.
- **i** Information and tips to make it even easier to use your IMPRESSA.

i COFFEE Display message

IMPORTANT SAFFGUARDS

Follow the basic safety precautions

When using electrical appliances, basic safety precautions shall always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons, do not immerse power cord, plugs, or body of machine in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
 Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of an accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'OFF' then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when dispensing hot steam, hot water or hot coffee
- For household use only.

SAVE THESE INSTRUCTIONS.

Pass them on to any subsequent user.

Intended use

The appliance is designed and intended for household use only. It shall only be used for coffee preparation and to heat milk and water, according to these instructions. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the appliance safely or
- are inexperienced or lack knowledge in how to use the appliance safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

Special power cord set instructions

- The power cord is provided to reduce the risk resulting from becoming entangled in or tripping over a long cord.
- The cord shall be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- This appliance has a 3-pin grounded plug.
- Do not modify the plug in any way.

Do NOT use extension cords.

If the user chooses to use an extension cord.

- the marked electrical rating of the extension cord shall be at least as great as the electrical rating of the appliance, and
- if the appliance is of the grounded type, the extension cord shall be a grounding type 3-wire cord, and
- the longer cord shall be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

⚠ WARNING



To reduce the risk of fire or electric shock, DO NOT remove any service covers. DO NOT modify the appliance in any way that is not described in these instructions. NO user serviceable parts included. Repair MUST be done by authorized personnel only.

In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from outlet and contact IURA customer service.

IMPORTANT SAFEGUARDS

▲ CAUTION

This appliance is for household use. Any servicing other than cleaning and user maintenance shall be performed by an authorized service representative:

- Do not immerse base in water or try to disassemble.
- Do not put the appliance or any individual parts in the dishwasher
- Check voltage to be sure that the voltage indicated on the name plate complies with your voltage.
- Never use warm or hot water to fill the water container. Use cold water only.
- Keep your hands and the cord away from hot parts of the appliance during operation.

There is a risk of scalds or burns on the spouts and the cappuccino frother / nozzle.

- Keep children away.
- Do not touch any hot parts. Use the handles or knobs provided.
- Ensure that the cappuccino frother / nozzle is correctly fitted and clean. If incorrectly fitted or if they become blocked, the cappuccino frother or its parts might come off.

NOTICE



- Never clean with scouring powders or hard implements.
- Ensure that the ventilation slots are not covered.
- Never pull out the drip tray during the brewing process. Only pull the drip tray when the display instructs you or when the appliance is ready for use.

NEVER DO (or you will void your warranty protection):

- Never fill instant coffee, chocolate mix etc. into the bean container or ground coffee funnel (filler funnel for ground coffee).
 It will damage the functioning of the brewing chamber.
- Never fill sugar coated coffee beans into the bean container.
 In case of doubt, call your dealer.
- Never fill anything other than coffee beans into the bean container (no chocolate, no rice, no nuts, no spices, nothing other than roasted coffee beans).
- Never fill frozen beans into the bean container. If you store beans in the freezer, let them thaw 3 to 4 hours before filling them into the bean container.
- Never fill anything but fresh, cold and clean water into the water tank, except when decalcifying.
- Never use mineral or carbonated water. You can use tap water, bottled water, spring water and reverse osmosis water.
- Never do anything with the machine which is not described in these instructions. In case of doubt, call your dealer.

Control elements



- 1 Bean container with aroma preservation cover
- 2 Water tank cover
- 3 Water tank
- 4 Power switch and power cord (back of the machine)
- 5 Coffee grounds container
- 6 Drip tray
- 7 Cup platform
- 8 Filler funnel cover
- 9 Filler funnel for ground coffee

- 10 Storage compartment cover
- 11 Grinder adjustment switch
- 12 Measuring spoon for ground coffee
- 13 Height-adjustable hot-water nozzle
- 14 Switch for hot water and steam preparation
- 15 Connector System® for removable frothers
- 16 Fine foam frother
 - 17 Height-adjustable coffee spout

8



Top of the machine

- 1 On/Off button
- 2 Rotary Switch

Front

- 4 Display
- 5 Preparation buttons
 - Ristretto button
 - Espresso button
 - □ Coffee button
 - . Hot Water button

 - Cappuccino button

The Connector System® permits the use of different cappuccino frothers. These are available from specialized dealers.

Professional fine foam frother (sold separately)

Milk foam
Hot milk

Milk foam
Hot milk

JURA on the Internet

Visit us on the Internet. You can download **short operating instructions** for your machine from the JURA website (www.jura.com). You will also find interesting and up-to-date information on your IMPRESSA and on every aspect of coffee.

Setting up the machine

When setting up your IMPRESSA, please note the following:

- Place the IMPRESSA on a horizontal surface that is not sensitive to water.
- Choose a spot for your IMPRESSA which protects the machine against overheating. Ensure that the ventilation slots are not covered.

Filling the bean container

NOTICE

Coffee beans which have been treated with additives (e.g. sugar), ground coffee or freeze-dried coffee will damage the grinder.

- ▶ Only use untreated coffee beans to fill the bean container.
 - ► Remove the aroma preservation cover.
 - Remove any dirt or foreign objects from inside the bean container.
 - Fill the bean container with coffee beans and close the aroma preservation cover.

First-time use

When using the machine for the first time, you can choose whether you want to operate IMPRESSA with or without the CLEARYL Blue filter cartridge. If the water hardness is 10° dH or more, we recommend using the filter cartridge. If you do not know the hardness of your water, you can find this out first (see Chapter 1 'Preparing and using for the first time – Determining the water hardness').

⚠ WARNING

 
If the machine is operated with a defective power cord, there is a danger of potentially fatal electric shock.

- ► Never use a machine which is damaged.
- Never use a machine which has a defective power cord.

1 The water volume is given as standard in 'oz'. You can change this setting to 'ml' in programming mode (see Chapter 4 'Permanent settings in programming mode – Unit for amount of water').



- ▶ Insert the power plug into a power socket.
- Switch on the IMPRESSA using the power switch on the back of the machine.
- ♦ Press the On/Off button to switch the IMPRESSA on. LANGUAGE ENGLISH appears on the display.
- ◆ Press the Rotary Switch to confirm the language. **CK** appears briefly on the display to confirm the setting. FILTERVYES
- i Now decide whether you want to operate your IMPRESSA with or without a CLEARYL Blue filter cartridge.





♠ Press the Rotary Switch. FILL MATER TANK

- ► Open the water tank cover.
- ► Remove the water tank and rinse it with cold water.
- ► Open the filter holder.
- ► Remove the CLEARYL Blue filter cartridge from the Welcome Pack.
- ► Insert the CLEARYL Blue filter cartridge into the water tank, exerting slight pressure.
- ► Close the filter holder. It will click into place audibly.
- **1** After three months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.
 - ► Fill the water tank with fresh, cold water and reinsert the tank.

SMITCHOPEN

 The arrow on the switch lights up.

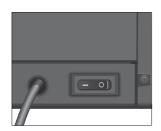







- ► Place a receptacle (at least 10 oz or 300 ml) under the fine foam frother and the coffee spout.
- Turn the switch to the

 position.

 FILTER RINSING, water flows out of the fine foam frother.
- You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.
- **i** The water may be slightly discolored. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 10 oz (300 ml). SHITCH CLOSE appears on the display.

Turn the switch to the ① position.
The illuminated arrow on the switch goes out.

SYSTEM FILLING, the system fills up with water.

HEATING, the machine heats up.

 
RINSING, the system is rinsed. The rinse stops automatically. READY appears on the display. Your IMPRESSA is

First-time use without filter cartridge activation

- Turn the Rotary Switch until FILTER № is displayed.
- ◆ Press the Rotary Switch.○ Appears briefly on the display.16 * dH

ready for use.

- i If you do not know the hardness of your water, you must find this out first (see Chapter 1 'Preparing and using for the first time – Determining the water hardness').
- Turn the Rotary Switch to change the water hardness setting, e.g. to ≥ ⇒ dH.
- ◆ Press the Rotary Switch.
 ○₭ appears briefly on the display.
 FILL WATER TANK
 - ► Open the water tank cover.
 - ► Remove the water tank and rinse it with cold water.



SMITCHOPEN

The arrow on the switch lights up.

- ► Place a receptacle under the fine foam frother and under the coffee spout.
- Turn the switch to the \$\frac{1}{2}\$ position.

 SYSTEM FILLING, the system fills up with water.

 SWITCH CLOSE
- Turn the switch to the position.
 The illuminated arrow on the switch goes out.

The marminated arrow on the switch goes out.

SYSTEM FILLING, the system fills up with water.

HEATING, the machine heats up.

RINSING, the system is rinsed. The rinse stops automatically. READY appears on the display. Your IMPRESSA is ready for use.

Determining the water hardness

You can find out what the water hardness is by using the Aquadur® test strip supplied as standard.

- ► Hold the test strip briefly (for 1 second) under flowing water. Shake off the water.
- ► Wait for about 1 minute.
- ► You will then be able to read the degree of water hardness from the discoloration of the Aquadur® test strip and the description on the packaging.



Level	Display German Degree (°dH)	Degrees of general hardness (°dGH)	•	Indicator Strip number of 'reddish' fields
Not active	-	-	-	-
Very soft water	<3	<3	< 53.4	None
Soft water	> 4	> 4	> 71	1
Hard water	> 8.4	> 8.4	> 150	2
Very hard water	> 14	> 14	> 250	3

Adjusting the grinder

You can adjust the grinder on a continuous scale to suit the degree of roast of your coffee.

NOTICE

If you adjust the consistency of grind when the grinder is not operating, the grinder adjustment switch could be damaged.

Only adjust the consistency of grind when the grinder is running.

The consistency of grind is correct if the coffee flows regularly from the coffee spout. In addition a fine, thick crema forms.

Example: Proceed as follows to change the consistency of grind **during** the preparation of an espresso.

- ▶ Place a cup under the coffee spout.
- ► Open the storage compartment cover.
- ▶ Press the Espresso button to start preparation.
 - ► Turn the grinder adjustment switch to the desired position while the grinder is running.
 - The preset amount of water flows into the cup. Preparation stops automatically.
 - ► Close the storage compartment cover.



Filling the water tank

Daily maintenance of the machine and hygiene when handling milk, coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.

NOTICE

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- Only fill the water tank with fresh, cold water.
 - ► Open the water tank cover.
 - ► Remove the water tank and rinse it with cold water.
 - ► Fill the water tank with fresh, cold water and reinsert the tank.
 - ► Close the water tank cover.



2 Preparation

⚠ WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- Use extreme care when handling hot liquid or steam.
- Allow liquid to cool down before drinking.
- In the event of scalding, rinse affected area with cold water and seek medical attention.
- Keep children AWAY.
- i You can stop the machine at any time while a specialty coffee, steam or hot water is being prepared. Just press any button (for a specialty coffee) or return the switch to its original position (for steam and hot water).
- i Before the grinding operation you can select the coffee strength by turning the Rotary Switch : MILD, NORMAL, STRONG OF EXTRA.
- i During the grinding operation you can select the coffee strength of **single products** by turning the Rotary Switch .
- i During preparation, you can change the preset amount of water or steam by turning the Rotary Switch .
- i You can follow the current status of preparation on the progress bar.
- i The water volume is given as standard in 'oz'. You can change this setting to 'ml' in programming mode (see Chapter 4 'Permanent settings in programming mode Unit for amount of water').

Coffee tastes best served hot. A cold porcelain cup cools the beverage – and impairs the taste. We therefore recommend prewarming the cups. The full coffee aroma can develop only in prewarmed cups. You can purchase a JURA cup warmer from your specialized dealer.

You can make **permanent settings** for all products in programming mode (see Chapter 4 'Permanent settings in programming mode – Product settings').

2 Preparation

Ristretto, espresso and coffee

Ristretto $_{\mathcal{D}}$, espresso $_{\mathcal{D}}$ and coffee $_{\mathcal{D}}$ are all prepared following this model.

Example: Proceed as follows to prepare one coffee.

Precondition: REPDY is displayed.

- ► Place a cup under the coffee spout.

Preparation starts. i COFFEE and the coffee strength are displayed. The preset amount of water for coffee flows into the cup.

Preparation stops automatically. READY appears on the display.



Two specialty coffees at the touch of a button

Two ristretti, two espressi or two coffees can always be prepared following the same model: Press the preparation button you want twice within two seconds.

Cappuccino


Your IMPRESSA can prepare a cappuccino without the cup having to be moved.

i This chapter applies to the **professional fine foam frother** and the **fine foam frother**.

Example: Proceed as follows to prepare one cappuccino.

Precondition: RERDY is displayed.

- ▶ Remove the protective cover from the fine foam frother.
- ► Connect the milk pipe to the fine foam frother. Use the short pipe for a milk container and the long pipe for a milk carton.
- ► Connect the other end of the milk pipe to a milk container or immerse it in a milk carton.

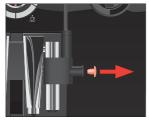



- ► Place a cup under the coffee spout and the fine foam frother. (Figure: Optional JURA Cool Control Basic 0.6 l)
- i Ensure that the filling height of the milk is **no higher** than the milk pipe connection on the fine foam frother.
- i If you are using the **professional fine foam frother,** turn the selector switch to the Milk Foam position $\hat{\Box}$.

♠ Press the Cappuccino button.

NORMAL

HERTING STERM

As soon as the machine has heated up, SWITCH OPEN appears.

The arrow on the switch lights up.

Turn the switch to the !! position.

CAPPLICATION, the milk foam is prepared. Preparation stops automatically when the preset amount of steam is reached.

SMITCH OLDSE

♠ Turn the switch to the ① position.

The illuminated arrow on the switch goes out.

CAPPUCCING appears on the display.

Coffee preparation starts. The preset amount of water for espresso flows into the cup.

Preparation stops automatically. READY appears on the display.

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk (see Chapter 5 'Maintenance – Cleaning the fine foam frother'). Your IMPRESSA will **not** prompt you to clean the fine foam frother.


Milk foam

- i This chapter applies to the **professional fine foam frother** and the **fine foam frother**.
- i With the professional fine foam frother, available as an optional accessory, you can also prepare hot milk.

Example: Proceed as follows to prepare milk foam.

Precondition: READY is displayed.

- ► Remove the protective cover from the fine foam frother.
- ► Connect the milk pipe to the fine foam frother. Use the short pipe for a milk container and the long pipe for a milk carton.
- ► Connect the other end of the milk pipe to a milk container or immerse it in a milk carton.

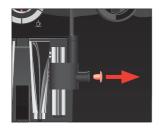

2 Preparation



- ► Place a cup under the fine foam frother. (Figure: Optional JURA Cool Control Basic 0.6 l)
- i Ensure that the filling height of the milk is **no higher** than the milk pipe connection on the fine foam frother.
- if you are using the **professional fine foam frother**, turn the selector switch to the Milk Foam position $\hat{\square}$.
- ♣ Press the Steam button.

HEATING STEAM

As soon as the machine has heated up, READY / STEAM appears.

The arrow on the switch lights up.

- Turn the switch to the ♣ position.
 STEAM, the milk foam is prepared. Preparation stops automatically when the preset amount of steam is reached.
 SMITCH CLOSE
- Turn the switch to the ① position.

 The illuminated arrow on the switch goes out. READY / STEAM appears on the display.
- i You can continue to prepare steam for the next 40 seconds or so without the machine having to heat up again.

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk (see Chapter 5 'Maintenance – Cleaning the fine foam frother'). Your IMPRESSA will **not** prompt you to clean the fine foam frother.

Ground coffee

You can choose to use a second coffee variety, for example decaffeinated coffee, with the filter funnel for ground coffee.

- i Never add more than two level measuring spoons of ground coffee.
- i Use ground coffee which is not ground too finely. Very fine coffee can block up the system so that the coffee only comes out in drips.
- i If you did not fill the machine with a sufficient amount of ground coffee, NOT ENOUGH PRE—GROUND is displayed and the IMPRESSA stops the operation.
- **1** The desired specialty coffee must be prepared within approximately one minute after filling with the ground coffee. Otherwise the IMPRESSA stops the operation and is once more ready for use.

All specialty coffees with ground coffee are prepared following this model.

Example: Proceed as follows to prepare one espresso using ground coffee

Precondition: READY is displayed.

- ▶ Place an espresso cup under the coffee spout.
- ► Open the cover of the filler funnel for ground coffee.

FILL PRE-GROUND

- Place one level measuring spoon of ground coffee into the filler funnel.
- ► Close the cover of the filler funnel.

SELECT BUTTON

Preparation starts. 1 ESPRESSO, the preset amount of water for espresso flows into the cup.

Preparation stops automatically. READY appears on the display.



2 Preparation

Permanently setting the amount of water for the cup size

It is easy to make permanent settings for the amount of water for all specialty coffees and hot water according to the cup size. Adjust the amount once as shown in the following example. Every time you prepare a drink in the future, this amount of water will be dispensed.

The permanent settings for adapting the amount of water to the cup size for all specialty coffees and hot water follow this model.

Example: Proceed as follows to **permanently** set the amount of water for one coffee.

Precondition: REPDY is displayed.

- ▶ Place a cup under the coffee spout.
- Press and hold the Coffee button.



- ▶ Hold the Coffee button down until ENOUGH COFFEE ? appears.
- - ► Press any button as soon as there is sufficient coffee in the cup.

Preparation stops. Appears briefly on the display. The set amount of water for one coffee is permanently stored.

- i You can alter this setting at any time by repeating the above procedure.
- You can also permanently set the amount of water for all specialty coffees and hot water in programming mode (see Chapter 4 'Permanent settings in programming mode Product settings').



Hot water

To obtain a perfect water flow, use the hot-water nozzle. You can find the hot-water nozzle under the cover of the storage compartment.

△ CAUTION

There is a danger of scalding from hot water splashes.

► Avoid direct contact with the skin.

Example: Proceed as follows to prepare hot water.

Precondition: READY is displayed.

- Carefully remove the fine foam frother from the Connector System[®] by twisting slightly.
- ► Open the storage compartment cover, take out the hotwater nozzle and close the cover again.
- ► Attach the hot-water nozzle to the connector.
- ► Place a cup under the hot-water nozzle.
- ↑ Press the Hot Water button.

EMITCHOPEN

The arrow on the switch lights up.

Turn the switch to the

↓ position.

MATER FORTION, the preset amount of water flows into the cup. Preparation stops automatically.

SWITCHCLOSE

- Turn the switch to the ① position.
 The illuminated arrow on the switch goes out. READY appears on the display.
- i You can also prepare any amount of hot water you require: To do this, turn the switch to the \$\frac{1}{4}\$ position. When there is enough water in the cup, turn the switch back to the \$\mathbb{O}\$ position.

 


3 Daily operation

3 Daily operation

Switching on

Daily maintenance of the machine and hygiene when handling milk, coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.



- ► Place a receptacle under the coffee spout.
- ♦ Press the On/Off button to switch the IMPRESSA on.

HERTING

RINSING, the system is rinsed. The rinse stops automatically. READY appears on the display. Your IMPRESSA is ready for use.



Daily maintenance



To ensure that you get many years of reliable service out of your IMPRESSA and to guarantee the optimum coffee quality, the machine requires daily maintenance.

- ▶ Pull out the drip tray.
- ► Empty the coffee grounds container and the drip tray. Rinse them both with warm water.
- ► Refit the coffee grounds container and the drip tray.
- ► Rinse the water tank with clean water.
- Clean the fine foam frother (see Chapter 5 'Maintenance Cleaning the fine foam frother').
- ► Dismantle and rinse the fine foam frother (see Chapter 5 'Maintenance Dismantling and rinsing the fine foam frother').
- ► Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfiber cloth).
- i In the interests of hygiene, we recommend changing the milk pipe on a regular basis (approx. every 6 months). Replacement pipes are available from specialized dealers.

Switching off



When the IMPRESSA is switched off, the system is automatically rinsed if a specialty coffee has been prepared. If cappuccino or milk foam has been prepared, the machine will also prompt you to rinse the cappuccino frother.

Precondition: READY is displayed.

- ► Place a receptacle under the fine foam frother and under the coffee spout.

The arrow on the switch lights up.

Turn the switch to the \$\frac{1}{4}\$ position.

CAPPUCCING RINSING, the fine foam frother is rinsed.

SWITCHCLOSE

- Turn the switch to the ① position.
 The illuminated arrow on the switch goes out.
 RINSING, the system is rinsed. The operation stops automatically. Your IMPRESSA is switched off.
- i When the IMPRESSA is switched off with the On/Off button, the machine consumes less than 0.1 W of standby energy. The machine can be completely disconnected from the power grid using the power switch.

4 Permanent settings in programming mode

⚠ WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ► Use extreme care when handling hot liquid or steam.
- Allow liquid to cool down before drinking.
- In the event of scalding, rinse affected area with cold water an seek medical attention.
- Keep children AWAY.

You can make permanent settings in programming mode. You can navigate through the program items and permanently save the required settings simply by turning and pressing the Rotary Switch. You can make the following settings with the Rotary Switch:

Program item	Sub-item	Explanation
RINSE	C CLEANING,	► Start the required maintenance program
	RINEE,	here.
	CRINSE,	If no action is taken in this program item,
	CLEAN,	programming mode is exited automatically
	FILTER (only if filter	after approximately 5 seconds.
	is activated),	
	DESCRIE (only if filter	
	is not activated)	
BUTTONS	SELECT BUTTON	► Select your settings for specialty coffees and
		hot water.
FILTER //	YES, NO	► Indicate whether you are operating your
FILTER-		IMPRESSA with or without a CLEARYL Blue
		filter cartridge.
HARDNESS (only if	1 * dH - 30 * dH	► Adjust the water hardness.
filter is not activated)		
ENERGY	SHVE V,	► Choose whether you want to operate your
ENERGY -		IMPRESSA with or without energy-saving
		mode.
OFF AFTER	15 MIN., 30 MIN.,	► Set the time after which the IMPRESSA
	i HRS i5 HRS.	should switch off automatically.
RINSES	INIT RINSE,	► Change the settings for the switch-on rinse
	C-RIMEE	and the cappuccino rinse.

Program item	Sub-item	Explanation
RESET ALL	PRODUCT,	► Reset the machine or the permanently set
	ALL PAGG.,	values of all products to the factory settings.
	MACHINE	
INFO	COUNTER,	► Keep track of all products prepared and view
	CLEAN,	the number of maintenance programs
	DESCRLE (only if filter	performed and the maintenance status.
	is not activated),	
	FILTER (only if filter	
	is activated),	
	VERSION	
DISPLAY	ML,OZ	► Select the unit for the amount of water.
LANGUAGE		► Select your language.
EXIT		► Exit programming mode.

Product settings



Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ► Use extreme care when handling hot liquid or steam.
- ► Allow liquid to cool down before drinking.
- In the event of scalding, rinse affected area with cold water an seek medical attention.
- ► Keep children AWAY.

In the program item **BUTTONS** you can make individual settings for all specialty coffees and hot water. The following permanent settings can be made:

Product	Amount	Coffee strength	Temperature
Ristretto,	Volume:	MILD, MORMAL,	MORMAL, HIGH
espresso,	0.50Z-8.00Z	STRONG, EXTRA	
coffee	(25 ml – 240 ml)		
2 ristretti,	Volume:	-	MORMAL, HIGH
2 espressi,	0.502-8.002		
2 coffees	(25 ml – 240 ml)		
	(per cup)		

4 Permanent settings in programming mode

Product	Amount	Coffee strength	Temperature
Cappuccino	Volume:	MILD, NORMAL,	MORMAL, HIGH
	0.50Z-8.00Z	ETRONG, EXTRA	
	(25 ml – 240 ml)		
	Amount of milk foam:		
	3 5EC - 120 5EC		
Steam	3 580 - 120 580	-	-
Hot water	Volume:	_	HORMAL, HOT,
	0.502-15.002		LOW
	(25 ml – 450 ml)		

Permanent settings in programming mode always follow the same model.

Example: Proceed as follows to change the coffee strength for one coffee from NORMAL to STRONG.

Precondition: READY is displayed.

- ◆ Press and hold the Rotary Switch until RINSE appears.
- Turn the Rotary Switch until **EUTTONS** is displayed.
- ◆ Press the Rotary Switch to enter the program item. SELECT BUTTON
 - i Next select the button of the product for which you would like to make settings. No product is prepared at this point.
 - i To change the setting for a double product, press the corresponding symbol twice within 2 seconds.
- - 1 COFFEE appears briefly on the display. VOLUME
- Turn the Rotary Switch until **TRENGTH** is displayed.
- ◆ Press the Rotary Switch to enter the program item.
 NORMAL
- Turn the Rotary Switch until **STRONG** is displayed.
- ◆ Press the Rotary Switch to confirm the setting.
 ○K appears briefly on the display.
 STRENGTH
- ♠ Turn the Rotary Switch until EXIT is displayed.
- ♦ Press the Rotary Switch to exit the program item.
- Turn the Rotary Switch until ■XIT is displayed.

♠ Press the Rotary Switch to exit programming mode.
READY

Setting the water hardness

i If you are using the CLEARYL Blue filter cartridge and have activated it, it is not possible to set the water hardness.

The harder the water is, the more frequently the IMPRESSA needs to be descaled. It is therefore important to set the water hardness accurately.

The water hardness can be adjusted on a continuous scale between 1° dH and 30° dH.

Example: Proceed as follows to change the water hardness setting from 15 ° dH to 25 ° dH.

Precondition: READY is displayed.

- ◆ Press and hold the Rotary Switch until RINSE appears.
- Turn the Rotary Switch until HARDNESS is displayed.
- ◆ Press the Rotary Switch to enter the program item.
 15 * dH
- Turn the Rotary Switch until 25 * 4H is displayed.
- ◆ Press the Rotary Switch to confirm the setting.
 ★ appears briefly on the display.
 HARDNESS
- ♠ Turn the Rotary Switch until EXIT is displayed.
- ♣ Press the Rotary Switch to exit programming mode.
 READY

Energy-saving mode

The energy-saving mode (Energy Save Mode, E.S.M.®) helps you to prevent your machine from consuming power unnecessarily and to actively save energy:

- ENERGY /
 - Soon after the last preparation, the IMPRESSA stops heating up. After about 5 minutes the message ENERGY ON is displayed.
 - Before you can prepare a specialty coffee, steam or hot water, the machine must heat up.
- ENERGY -
 - All specialty coffees as well as hot water can be prepared without having to wait.
 - Before you can prepare steam, the machine must heat up.

4 Permanent settings in programming mode

Example: Proceed as follows to change the energy-saving mode from **ENERGY** \checkmark to **ENERGY** -.

Precondition: READY is displayed.

- ◆ Press and hold the Rotary Switch until RINSE appears.
- Turn the Rotary Switch until **EMERGY** \(is displayed.
- Press the Rotary Switch to enter the program item.
- Turn the Rotary Switch until SAVE is displayed.
- ◆ Press the Rotary Switch to confirm the setting.
 ○K appears briefly on the display.
 ENERGY —
- ♠ Turn the Rotary Switch until EXIT is displayed.
- ◆ Press the Rotary Switch to exit programming mode.
 READY

Automatic switch-off

By instructing your IMPRESSA to automatically switch itself off, you can cut down your energy consumption. If this function is activated, your IMPRESSA switches off automatically after the preset time following the last action on the machine.

You can set the automatic switch-off to 15 minutes, 30 minutes or 1–15 hours.

Example: Proceed as follows to change the switch-off time from 2 HRS = to 1 HRS =.

Precondition: READY is displayed.

- ◆ Press and hold the Rotary Switch until ■IMSE appears.
- Turn the Rotary Switch until OFF FIFTER is displayed.
- ◆ Press the Rotary Switch to enter the program item.
 2 HRS.
- Turn the Rotary Switch until : HEE: is displayed.
- ◆ Press the Rotary Switch to confirm the setting.
 ← appears briefly on the display.
 FF AFTER
- ♠ Turn the Rotary Switch until EXIT is displayed.
- Press the Rotary Switch to exit programming mode.
 READY

Rinses

In the program item RINSES you can make the following settings:

- INITRINSERUTOMATIC
 - The switch-on rinse is started automatically.
- INITRINSE MANUAL
 - The switch-on rinse must be started manually.
- C-RINSE AFTER 10:
 - You are prompted to rinse the cappuccino frother 10 minutes after preparing cappuccino or milk foam.
- C-RINSENOW
 - You are prompted to rinse the cappuccino frother immediately after preparing cappuccino or milk foam.

Example: Proceed as follows to make the machine prompt you to perform cappuccino frother rinsing **immediately** after preparing a cappuccino or milk foam.

Precondition: READY is displayed.

- ◆ Press and hold the Rotary Switch until ■IMEE appears.
- Turn the Rotary Switch until RIMSES is displayed.
- Press the Rotary Switch to enter the program item.
 INITRINSE
- Turn the Rotary Switch until RINSE is displayed.
- ◆ Press the Rotary Switch to enter the program item.
 AFTER 10:
- Turn the Rotary Switch until NOW is displayed.
- ◆ Press the Rotary Switch to confirm the setting.
 Appears briefly on the display.
 ATNOTE
- Turn the Rotary Switch until **EXIT** is displayed.
- Press the Rotary Switch to exit the program item.
- ♠ Turn the Rotary Switch until EXIT is displayed.
- ◆ Press the Rotary Switch to exit programming mode.
 READY

4 Permanent settings in programming mode

Restore factory settings

In the program item RESET ALL you can reset various settings to their factory settings:

- PRODUCT
 - The settings (amount, coffee strength and temperature) for any product can be reset individually to the factory settings.
 The corresponding double product is also reset to the factory settings at the same time.
- ALL PROD.
 - The settings (amount, coffee strength and temperature) for all products are reset to the factory settings.
- MACHINE
 - All user settings (apart from the 'filter' and 'water hardness') are reset to factory settings. Your IMPRESSA then switches off.

Example: Proceed as follows to reset the values for 'Espresso' to the factory settings.

Precondition: REPDY is displayed.

- ♣ Press and hold the Rotary Switch until RIMSE appears.
- Turn the Rotary Switch until RESET ALL is displayed.
- ♠ Press the Rotary Switch to enter the program item.
 PRODUCT
- ♣ Press the Rotary Switch.
 SELECT BUTTON
- ▶ Press the Espresso button.
 ○₭ appears briefly on the display.
 ○₩ ERODI ICT
- ♠ Turn the Rotary Switch until EXIT is displayed.
- ◆ Press the Rotary Switch to exit the program item.
 RESET ALL
- ♠ Turn the Rotary Switch until EXIT is displayed.
- ◆ Press the Rotary Switch to exit programming mode.
 READY

Querying information

In the program item IMFO you can view the following information:

- Number of products prepared
- Number of maintenance programs performed (cleaning, descaling, filter changes) and maintenance status
- Software version

Example: Proceed as follows to view the number of coffees prepared.

Precondition: REPDY is displayed.

- ◆ Press and hold the Rotary Switch until RINSE appears.
- Turn the Rotary Switch until INFO is displayed.
- ◆ Press the Rotary Switch to enter the program item.
 COUNTER
- ◆ Press the Rotary Switch to enter the program item.
 ② (example), the total number of all products prepared is displayed.
- - i COFFEE 80 (example), the number of coffees prepared is displayed.
 - i Press the Coffee button D again to view the number of double products.
- ♠ Turn the Rotary Switch to view additional information.
- **1** The maintenance status can also be displayed in addition to the number of performed maintenance programs. The bar shows the current maintenance status. When the bar is completely filled, your IMPRESSA will request the respective maintenance program.
- Press the Rotary Switch to exit the program item.
- i Turn the Rotary Switch to view additional information.
- Press the Rotary Switch to exit the program item.
- ♠ Turn the Rotary Switch until EXIT is displayed.
- ◆ Press the Rotary Switch to exit programming mode.
 READY

4 Permanent settings in programming mode

Unit for amount of water

In the program item DISPLAY you can select the unit used for the amount of water.

Example: Proceed as follows to change the unit for the amount of water from oz to ML.

Precondition: READY is displayed.

- ◆ Press and hold the Rotary Switch until INSE appears.
- Turn the Rotary Switch until DISPLAY is displayed.
- Press the Rotary Switch to enter the program item.
- Turn the Rotary Switch until ::... is displayed.
- Press the Rotary Switch to confirm the setting.
 Appears briefly on the display.
- Turn the Rotary Switch until ■XIT is displayed.
- ◆ Press the Rotary Switch to exit programming mode.
 READY

Language

In the program item **LANGUAGE** you can select the language used by your IMPRESSA.

Example: Proceed as follows to change the language from ENGLISH to DEUTSOH.

Precondition: READY is displayed.

- ◆ Press and hold the Rotary Switch until RINSE appears.
- Turn the Rotary Switch until LANGUAGE is displayed.
- ◆ Press the Rotary Switch to enter the program item.
 LANGUAGE ENGLISH
- Turn the Rotary Switch until □EUTSCH is displayed.
- ◆ Press the Rotary Switch to confirm the setting.
 ★ appears briefly on the display.
 SEFACHE
- Turn the Rotary Switch until **EXIT** is displayed.
- ♠ Press the Rotary Switch to exit programming mode.
 ■EREIT

5 Maintenance

⚠ WARNING

Use of maintenance products that are harmful to health and discharge of liquids during maintenance program. Harmful if swallowed. Irritating to eyes and skin.

- ► Keep children AWAY.
- Keep children away from the machine while it is performing a maintenance program.
- Avoid contact with skin and eyes.
- Avoid generation of dust. Do not inhale dust.
- When using do not eat or drink.
- Keep maintenance products away from food, drink and animal food.
- Keep container tightly closed and dry. Keep in a cool place.

Your IMPRESSA has the following integrated maintenance programs:

- Rinsing the machine (RINSE)
- Rinsing the fine foam frother (CRINSE)
- Cleaning the fine foam frother (© CLEANING)
- Changing the filter (FILTER)
- Cleaning the machine (CLEAN)
- Descaling the machine (DESCALE) (only if filter is not activated)
- i Clean the machine, change the filter or descale the machine when you are prompted to do so.
- i You can start the maintenance programs at any time in programming mode (program item RINSE). If no action is taken in this program item, programming mode is exited automatically after approximately 5 seconds.
- i Your IMPRESSA will not prompt you to clean the fine foam frother. In the interests of hygiene, you should clean the fine foam frother **daily** when you have been preparing milk.

5 Maintenance

Rinsing the machine

You can initiate the rinse operation manually at any time.

Precondition: REPDY is displayed.

- ▶ Place a receptacle under the coffee spout.
- ◆ Press and hold the Rotary Switch until RINSE appears.
- ◆ Press the Rotary Switch to enter the program item.
 CLEANING
- Turn the Rotary Switch until RINSE is displayed.
- Press the Rotary Switch to initiate the rinse operation. RINSING, water flows out of the coffee spout. The rinse stops automatically. READY appears on the display.

Rinsing the fine foam frother

i This chapter applies to the **professional fine foam frother** and the **fine foam frother**.

After each milk preparation, the IMPRESSA prompts you to perform a cappuccino rinse.

Precondition: RINSE CAPPUCCINO is displayed and the Maintenance button & lights up.

- ▶ Place a receptacle under the fine foam frother.
- ∴ Press the Maintenance button.

 
SHITCHOPEN

The arrow on the switch lights up.

- Turn the switch to the

 position.

 CAPPUCCING RINSING, the fine foam frother is rinsed.
 - The rinse stops automatically. **SHITCH CLOSE** appears on the display.
- Turn the switch to the ① position. The illuminated arrow on the switch goes out. READY appears on the display.



i This chapter applies to the **professional fine foam frother** and the **fine foam frother**.

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk. Your IMPRESSA will **not** prompt you to clean the fine foam frother.



⚠ WARNING

Non-recommended cleaning agents will not optimally remove milk residues. This may cause the cappuccino frother to become blocked and fly off the machine. Discharge of hot steam.

Use only original JURA Cappuccino Cleaner.

⚠ WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- Keep children AWAY.
- Avoid contact with skin and eyes.
- After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.
- i JURA Cappuccino Cleaner is available from specialized dealers.

Precondition: READY is displayed.

- ◆ Press and hold the Rotary Switch until RINSE appears.
- ♠ Press the Rotary Switch to enter the program item.
 - COLEANING
- ◆ Press the Rotary Switch.

CLEANER FOR CAPPU.

- ▶ Remove the milk pipe from the milk container or carton.
- Pour 8.5 oz (250 ml) of fresh water into a receptacle and add one capful of Cappuccino Cleaner.
- ► Immerse the milk pipe in the receptacle.
- ▶ Place a receptacle under the fine foam frother.
- ♠ Press the Rotary Switch.

HERTING/STERM

As soon as the machine has heated up, SWITCH OPEN appears.

The arrow on the switch lights up.

Turn the switch to the \$\frac{1}{4}\$ position.

CAPPUCCING OLEANING, the fine foam frother and the milk pipe are cleaned.

SWITCH CLOSE



5 Maintenance

- Turn the switch to the ① position.
 - ► Rinse the receptacle thoroughly, fill it with 8.5 oz (250 ml) of fresh water and immerse the milk pipe in the water.
 - ► Empty the other receptacle and place it under the fine foam frother once more.
- Turn the switch to the ¼ position.
 CAPPUCCING CLEANING, the fine foam frother and the milk pipe are rinsed with fresh water.


SWITCH CLOSE

Turn the switch to the position.
The illuminated arrow on the switch goes out. READY appears on the display.

Dismantling and rinsing the fine foam frother

To make sure the fine foam frother works properly, and in the interests of hygiene, it must be dismantled and rinsed **daily** if you have been preparing milk. Your IMPRESSA will not prompt you to dismantle and rinse the frother.

- ► Remove the milk pipe and rinse it thoroughly under running water
- Carefully remove the fine foam frother from the Connector System[®] by twisting slightly.
- ▶ Dismantle the fine foam frother into its individual parts.
- ► Rinse all the parts of the fine foam frother thoroughly under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in JURA Cappuccino Cleaner and then rinse them thoroughly.
- ▶ Re-assemble the fine foam frother.
- **i** Ensure that all individual parts are correctly and firmly connected to ensure optimum operation.
 - ► Firmly attach the fine foam frother to the Connector System[©].

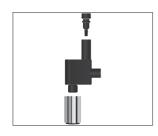

Dismantling and rinsing the professional fine foam frother



To make sure the professional fine foam frother (sold separately) works properly, and in the interests of hygiene, it must be dismantled and rinsed **daily** if you have been preparing milk. Your IMPRESSA will not prompt you to dismantle and rinse the frother.

- Remove the milk pipe and rinse it thoroughly under running water.
- ► Carefully remove the professional fine foam frother from the Connector System® by twisting slightly.
- ► Dismantle the professional fine foam frother into its individual parts.
- Rinse all the parts of the professional fine foam frother thoroughly under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in JURA Cappuccino Cleaner and then rinse them thoroughly.
- ► Re-assemble the professional fine foam frother.
- **i** Ensure that all individual parts are correctly and firmly connected to ensure optimum operation.
 - ► Firmly attach the professional fine foam frother to the Connector System[©].

Inserting and activating the filter

Your IMPRESSA no longer has to be descaled if you are using the CLEARYL Blue filter cartridge. If you did not activate the filter cartridge the first time you used the machine, you can do this now as follows.

Perform the 'inserting the filter' operation without any interruptions. This will ensure that your IMPRESSA always produces its best.

Precondition: READY is displayed.

- ◆ Press and hold the Rotary Switch until ■IMSE appears.
- Turn the Rotary Switch until FILTER is displayed.
- Press the Rotary Switch to enter the program item.
 NO
- ♠ Turn the Rotary Switch until YES is displayed.
- ◆ Press the Rotary Switch to confirm the setting.
 ★ appears briefly on the display.
 FILTER INSERT
 - ► Remove and empty the water tank.
 - ► Open the filter holder.





- Remove the CLEARYL Blue filter cartridge from the Welcome Pack.
- ► Insert the CLEARYL Blue filter cartridge into the water tank, exerting slight pressure.
- ► Close the filter holder. It will click into place audibly.
- **i** After three months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.
 - ► Fill the water tank with fresh, cold water and reinsert the tank.
 - ► Place a receptacle (at least 10 oz or 300 ml) under the fine foam frother.
- ♠ Press the Rotary Switch.

SWITCHOPEN

The arrow on the switch lights up.

- Turn the switch to the
 position.
 - FILTER RINSING, water flows out of the fine foam frother.
 - i You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.
 - **i** The water may be slightly discolored. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 10 oz (300 ml). SHITCH CLOSE appears on the display.

♠ Turn the switch to the ① position.

The illuminated arrow on the switch goes out.

HEATING, the machine heats up.

READY appears on the display. The filter is now activated.

Changing the filter

- **1** After 2000 oz (60 liters) of water have flowed through, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.
- **i** After three months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.
- i If the CLEARYL Blue filter cartridge is not activated in programming mode, you will not be prompted to change the filter.

 
i CLEARYL filter cartridges are available from specialized dealers.

Precondition: REMEY / FILTER is displayed and the Maintenance button :: lights up.

♣ Press the Maintenance button.

FILTER CHANGE

- ▶ Remove and empty the water tank.
- ► Open the filter holder and remove the old CLEARYL Blue filter cartridge.
- ► Insert a new CLEARYL Blue filter cartridge into the water tank, exerting slight pressure.
- ► Close the filter holder. It will click into place audibly.
- ► Fill the water tank with fresh, cold water and reinsert the tank.



The arrow on the switch lights up.

- ♠ Turn the switch to the ¼ position. FILTER RINGING, water flows out of the fine foam frother.
- You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.
- **1** The water may be slightly discolored. This is not harmful to health and does not affect the taste

Rinsing of the filter stops automatically after approximately 10 oz (300 ml). SHITCH CLOSE appears on the display.

Turn the switch to the ① position. The illuminated arrow on the switch goes out. HEATING, the machine heats up. READY appears on the display.





Cleaning the machine

After 200 preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

⚠ WARNING

Non-recommended (e.g. liquid) cleaning agents may contain substances that could damage the machine or leave residues.

 Use only original JURA cleaning tablets. These are specially formulated for your machine.

⚠ WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- Keep children AWAY.
- Avoid contact with skin and eyes.
- Avoid generation of dust. Do not inhale dust.
- After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.
- i The cleaning program lasts approximately 20 minutes.
- i Do not interrupt the cleaning program. The quality of cleaning will be impaired if you do so.
- i JURA cleaning tablets are available from specialized dealers.

Precondition: READY / CLEAN is displayed and the Maintenance button ★ lights up.

∴ Press the Maintenance button.

EMETY TERY

► Empty the drip tray and coffee grounds container and put them back into the machine.

FRESS RINSE, the Maintenance button ∴ lights up.

- ▶ Place a receptacle under the coffee spout.
- ∴ Press the Maintenance button.

CLEANING, water flows out of the coffee spout. The operation is interrupted, ADD TABLET.

► Open the cover of the filler funnel for ground coffee.





- ► Insert a JURA cleaning tablet into the filler funnel.
- ► Close the cover of the filler funnel.

FRESS RINSE, the Maintenance button & lights up.

∴ Press the Maintenance button.

CLEANING, water flows out of the coffee spout several times.

The operation stops automatically.

EMPTY TRAY

• Empty the drip tray and coffee grounds container and put them back into the machine.

HEATTME

READY appears on the display. Cleaning is now complete. Your IMPRESSA is once more ready for use.

Descaling the machine

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

⚠ WARNING

Non-recommended descaling agents (e.g. vinegar) may contain substances that could damage the machine or leave residues.

Use only original JURA descaling tablets. These are specially formulated for your machine.

⚠ WARNING

Harmful and irritating descaling agent. Harmful if swallowed. Irritating to eyes and skin.

- Keep children AWAY.
- Avoid contact with skin and eyes.
- Avoid generation of dust. Do not inhale dust.
- After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- After eye contact, immediately flush eyes with plenty of water.
 Remove contact lenses. Seek medical advice.
- If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

NOTICE

If the descaling operation is interrupted, there may be damage to the machine.

► Allow the descaling program to run to the end.

- **i** The descaling program lasts approximately 45 minutes.
- **i** JURA descaling tablets are available from specialized dealers.
- i If you use a CLEARYL Blue filter cartridge and this is activated, you will not be prompted to descale.
- if the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out. Clean up any splashes immediately.

Precondition: READY / DESCALE is displayed and the Maintenance button ★ lights up.

♣ Press the Maintenance button.

EMPTY TRAY

► Empty the drip tray and coffee grounds container and put them back into the machine.

ACENT IN TANK

- ▶ Remove and empty the water tank.
- ► Completely dissolve the contents of one blister (3 JURA descaling tablets) in a receptacle holding 500 ml of water. This may take several minutes.
- Pour the solution into the empty water tank and insert it into the machine.

SWITCHOPEN

The arrow on the switch lights up.

- Carefully remove the fine foam frother from the Connector System[®] by twisting slightly.
- ► Place a receptacle (at least 500 ml) under the Connector System[©].
- Turn the switch to the
 position.

DESCALING, water flows out of the Connector System® several times. The Maintenance button & flashes during the descaling operation.

The operation is interrupted, SHITCH CLOSE.

Turn the switch to the position.

DESCALING, the descaling operation is continued. The Maintenance button & flashes during the descaling operation.

The operation is interrupted, EMPTY TRAY.

► Empty the drip tray and coffee grounds container and put them back into the machine

FILL WATER TANK





- ► Empty the receptacle and place it under the Connector System[®] and the coffee spout.
- ► Remove the water tank and rinse it thoroughly.
- Fill the water tank with fresh, cold water and reinsert the tank.

SUTTEM SEEM

The arrow on the switch lights up.

♠ Turn the switch to the \$\frac{1}{4}\$ position.

DESCALING, the descaling operation is continued. The Maintenance button & flashes during the descaling operation.

The operation is interrupted, SMITCH CLOSE.

♠ Turn the switch to the ① position.

DESCALING, the descaling operation is continued. The Maintenance button & flashes during the descaling operation.

The operation is interrupted, DESCALING.

Water flows out of the coffee spout.

EMPTY TRAY

- ► Re-assemble the fine foam frother.
- ► Empty the drip tray and coffee grounds container and put them back into the machine.

READY appears on the display. Descaling is now complete. Your IMPRESSA is once more ready for use.

i If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: FILL BEAMS is displayed.

- ♦ Switch the machine off with the On/Off button.
- ► Switch the machine off at the power switch.
 - ► Remove the aroma preservation cover.
 - ► Clean the bean container with a soft, dry cloth.
 - ► Fill the bean container with coffee beans and close the aroma preservation cover.

Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ► Remove the water tank.
- ► If you use a CLEARYL Blue filter cartridge, remove this.
- ► Descale the tank with a mild conventional descaling agent in accordance with the manufacturer's instructions.
- ► Rinse out the water tank thoroughly.
- ► If you use a CLEARYL Blue filter cartridge, insert this again.
- Fill the water tank with fresh, cold water and reinsert the tank.

6 Display messages

Message	Cause/Result	Action
FILL WATER TANK	The water tank is empty. You cannot prepare any products.	► Fill the water tank (see Chapter 1 'Preparing and using for the first time – Filling the water tank').
EMPTY GROUNDS	The coffee grounds container is full. You cannot prepare any products.	► Empty the coffee grounds container and the drip tray (see Chapter 3 'Daily operation – Daily maintenance').
TRAY MISSING	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any products.	► Fit the drip tray.
FILL BEAMS	The bean container is empty. You cannot prepare any products.	► Fill the bean container (see Chapter 1 'Preparing and using for the first time – Filling the bean container').
PRESS RINSE	The IMPRESSA is prompting you to perform a rinse or continue a maintenance program that was already started.	► Press the Maintenance button to start the rinse or to continue the mainte- nance program.
RINSE CAPPUCCINO	The IMPRESSA requests a cappuccino rinse.	► Press the Maintenance button to start the cappuccino rinse.
READY/ FILTER	The filter cartridge no longer works.	► Replace the CLEARYL Blue filter cartridge (see Chapter 5 'Maintenance – Changing the filter').
READY/ CLEAN	The IMPRESSA is prompting you to clean it.	► Perform cleaning (see Chapter 5 'Maintenance – Cleaning the machine').
READY DESCALE	The IMPRESSA is prompting you to descale it.	► Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').
NOT ENOUGH PRE-GROUND	There is insufficient ground coffee in the machine; the IMPRESSA stops the operation.	► The next time you prepare a beverage, add more ground coffee (see Chapter 2 'Preparation – Ground coffee').
TOO HOT	The system is too hot to start a maintenance program.	► Wait for several minutes until the system has cooled or prepare a specialty coffee or hot water.

7 Troubleshooting

Problem	Cause/Result	Action
Insufficient foam is produced when the milk is frothed or milk sprays out of the fine foam frother.	The fine foam frother is dirty.	 Clean the fine foam frother (see Chapter 5 'Maintenance – Cleaning the fine foam frother'). Dismantle and rinse the fine foam frother (see Chapter 5 'Maintenance – Dismantling and rinsing the fine foam frother').
Coffee only comes out in drips when it is being prepared.	Coffee or ground coffee has been ground too finely and is blocking the system. The same filter cartridge may have been used several times or the water hardness set incorrectly in the programming mode.	► Put the grinder on a coarser setting or use coarser ground coffee (see Chapter 1 'Preparing and using for the first time – Adjusting the grinder'). ► Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').
Water hardness cannot be adjusted.	The CLEARYL Blue filter cartridge is activated.	► Deactivate the filter cartridge in programming mode.
FILL WATER TANK is displayed although the water tank is full.	The water tank float is trapped.	► Descale the water tank (see Chapter 5 'Maintenance – Descaling the water tank').
Little or no water or steam comes out of the fine foam frother. The pump is very quiet.	The connector of the fine foam frother may be blocked by milk residues or limescale fragments loosened during descaling.	 ▶ Remove the fine foam frother. ▶ Unscrew the black connector with the aid of the hexagonal hole on the measuring spoon for ground coffee. ▶ Clean the connector thoroughly. ▶ Screw the connector back on by hand. ▶ Carefully tighten it using the hexagonal hole on the measuring spoon, turning by no more than a quarter of a rotation.
Grinder is making a very loud noise.	There are foreign objects in the grinder.	► Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

7 Troubleshooting

Problem	Cause/Result	Action
ERROR 2 or	If the machine has been	► Warm the machine at room tempera-
ERROR 5 is	exposed to the cold for a	ture.
displayed.	long period of time, heating	
	may be disabled for safety	
	reasons.	
Other ERROR	-	► Switch the IMPRESSA off at the power
messages are		switch. Contact customer support in
displayed.		your country (see Chapter 11 'JURA
		contact details / Legal information').

i If you were unable to solve the problem, contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

8 Transport and environmentally friendly disposal

Transport / Emptying the system

Keep the packaging for your IMPRESSA. It should be used to protect the machine during transport.

In order to protect the IMPRESSA from frost during transport, the system must be emptied.



- ► Place a receptacle under the fine foam frother.
- ♣ Press the Steam button.

HEATING/STEAM

As soon as the machine has heated up, READY / STEAM appears.

The arrow on the switch lights up.

- ► Turn the switch to the \$\frac{1}{4}\$ position.

 STEAM, hot steam is discharged from the fine foam frother.
 - ▶ Remove and empty the water tank.
- Turn the Rotary Switch until SO SEC is displayed. Steam will continue to be discharged from the fine foam frother until the system is empty.

SMITCH OLDSE

- Turn the switch to the ⊕ position. The illuminated arrow on the switch goes out. FILL MATER TANK appears on the display.
- ♦ Press the On/Off button.
 Your IMPRESSA is switched off.

Disposal

Please dispose of old machines in an environmentally neutral way.



9 Technical data

Voltage	120 V ~, 60 Hz
Power	1450 W
Conformity mark	CUL US
Energy consumption ENERGY ✓	approx. 6 Wh
Energy consumption ENERGY —	approx. 13 Wh
Pump pressure	Static, max. 15 bar
Holding capacity of water tank	64 oz (1.9 l)
Holding capacity of bean container	11 oz (310 g)
Holding capacity of coffee grounds container	Max. 15 portions
Cord length	Approx. 59 in.
	(Approx. 1.5 m)
Weight	21 lb (9.6 kg)
Dimensions (W \times H \times D)	11.2 × 14 × 17.5 in. (28.5 × 35.5 × 44.5 cm)

Information for testers (repeat test in accordance with DIN VDE 0701-0702): The central grounding point (CGP) is located on the underside of the machine, right next to the power cord's connection point.

Directives

The machine complies with the following directives:

- Standard UL 1082
- Canadian Standard CSA C22.2 No. 64

10 Index

A			Contact details 56
	Addresses 56		Cover
	Aroma preservation cover		Filler funnel for ground coffee 8
	Bean container with aroma preservation		Storage compartment 8
	cover 8		Water tank 8
	Automatic switch-off 28		Customer support 56
В		_	Customer support 56
	Bean container	D	
	Bean container with aroma preservation		Descaling
	cover 8		Machine 41
	Cleaning 43		Water tank 44
	Filling 10		Display 9
	Bus bar		Display messages 45
	Technical data 49		Disposal 48
	Button		Double product 16
	Cappuccino button 9		Drip tray 8
	Coffee button 9	Ε	
	Espresso button 9		Emptying the system 48
	Hot Water button 9		Energy-saving mode 27
	Maintenance button 9		Errors
	On/Off button 9		Troubleshooting 46
	Ristretto button 9		Espresso 16
	Steam button 9	F	
_		•	Factory settings
C	Communication 10		Restore factory settings 30
	Cappuccino 16		Filler funnel
	Cappuccino frother rinsing 29, 34 Central grounding point 49		Filler funnel for ground coffee 8
	Cleaning		Filling
	Bean container 43		Bean container 10
	Fine foam frother 34		Water tank 14
	Machine 40		Filter
	CLEARYL Blue filter cartridge		Changing 38
	Changing 38		Inserting and activating the filter 37
	Inserting and activating the filter 37		Fine foam frother 8
	Coffee 16		Cleaning 34
	Coffee grounds container 8		Dismantling and rinsing 36
	Coffee spout		Rinsing 34
	Height-adjustable coffee spout 8		First-time use 10
	Connector System© 8		With filter cartridge activation 11
	Consistency of grind		Without filter cartridge activation 12
	Adjusting the grinder 14		
	Grinder adjustment switch 8		

G		Р	
	Grinder adjustment switch 8 Ground coffee 19	Permanently setting the water for the o	cup
	Measuring spoon for ground coffee 8	Permanent settings in programming m 24	node
	Grounding point 49	Power cord 8	
Н		Power switch 8	
	Height-adjustable coffee spout 8	Preparation 15	
	Hotline 56	Cappuccino 16	
	Hot water 21	Coffee 16	
	Hot water and steam preparation	Espresso 16	
	Switch for hot water and steam prepara-	Ground coffee 19	
	tion 8	Hot water 21	
	Hot-water nozzle 8		
ī		Milk foam 17	
•	Important safeguards	Ristretto 16	
	Safety 4	Two specialty coffees 16	
	Instant coffee	Problems	
	Ground coffee 19	Troubleshooting 46 Product settings 25	
	Internet 10	Professional fine foam frother	
	memee 10	Dismantling and rinsing 37	
J		Programming mode 24	
	JURA	Automatic switch-off 28	
	Contact details 56	Cappuccino frother rinsing 29	
	Internet 10	Energy-saving mode 27	
L		Language 32	
	Language 32	Product settings 25	
N	1	Querying information 31	
IV	Machine	Restore factory settings 30	
	Cleaning 40	Rinses 29	
	Descaling 41	Setting the water hardness 27	
	Rinsing 34	Switch-on rinse 29	
	Setting up 10	Unit for amount of water 32	
	Switching off 23		
		Q	
	Switching on 22 Maintenance 33	Querying information 31	
	Daily maintenance 22	R	
	Measuring spoon for ground coffee 8	Rinses 29	
	Messages, display 45	Cappuccino frother rinsing 29, 34	
	Milk foam 17	Switch-on rinse 29	
		Rinsing	
		Fine foam frother 34	
		Machine 34	
		Ristretto 16	
		Rotary Switch 9	

S	
	Safety
	Important safeguards 4
	Settings
	Permanent settings in programming
	mode 24
	Setting up
	Setting up the machine 10
	Short operating instructions 10
	Switch for hot water and steam preparation 8
	Switching off
	Machine 23
	Switching on
	Machine 22
	Switch-off
	Automatic switch-off 28
	Switch-on rinse 29
	Symbol description 3
Τ	
	Technical data 49
	Tel 56
	Transport 48
	Troubleshooting 46 Two products 16
	Two products to
U	
	Unit for amount of water 32
	Use, First-time 10
W	
	Water hardness
	Determining the water hardness 13
	Setting the water hardness 27
	Water tank 8
	Descaling 44
	Filling 14
	Website 10

– intentionally blank –

– intentionally blank –

– intentionally blank –

11 JURA contact details / Legal information

11 JURA contact details / Legal information

JURA Elektroapparate AG Kaffeeweltstrasse 10 CH-4626 Niederbuchsiten Switzerland

	USA: JURA CAPRESSO, Inc.	Canada: FAEMA
Customer Service		
Phone	1-800-220-5701	1-(855)-544-8600
E-Mail	contact@jura-capresso.com	info@juracanada.ca
Opening Hours (EST)	Mon – Thu 9 am – 9 pm	
	Fri 9 am – 8 pm	
	Sat 9 am – 5 pm	
Distributor Address	81 Ruckman Road,	115 Matheson Boulevard East
	Closter, NJ 07624	Mississauga, Ontario, L4Z 1X8
Phone	001 (201) 767-3999	1-(905)-501-8600
Fax	001 (201) 767-9684	
Internet	www.us.jura.com	www.faema-canada.jura.com

@ You will find additional contact details for your country at www.jura.com.

Technical changes

We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colors of the machine. Some details of your IMPRESSA may vary.

Feedback

Your opinion is important to us! Use the contact link at www.jura.com.

Copyright

The instructions for use contain information which is protected by copyright. It is not permitted to photocopy these instructions for use or translate them into another language without the prior written consent of JURA Elektroapparate AG.